PRODUCT MANUAL

OCTOBER 2016

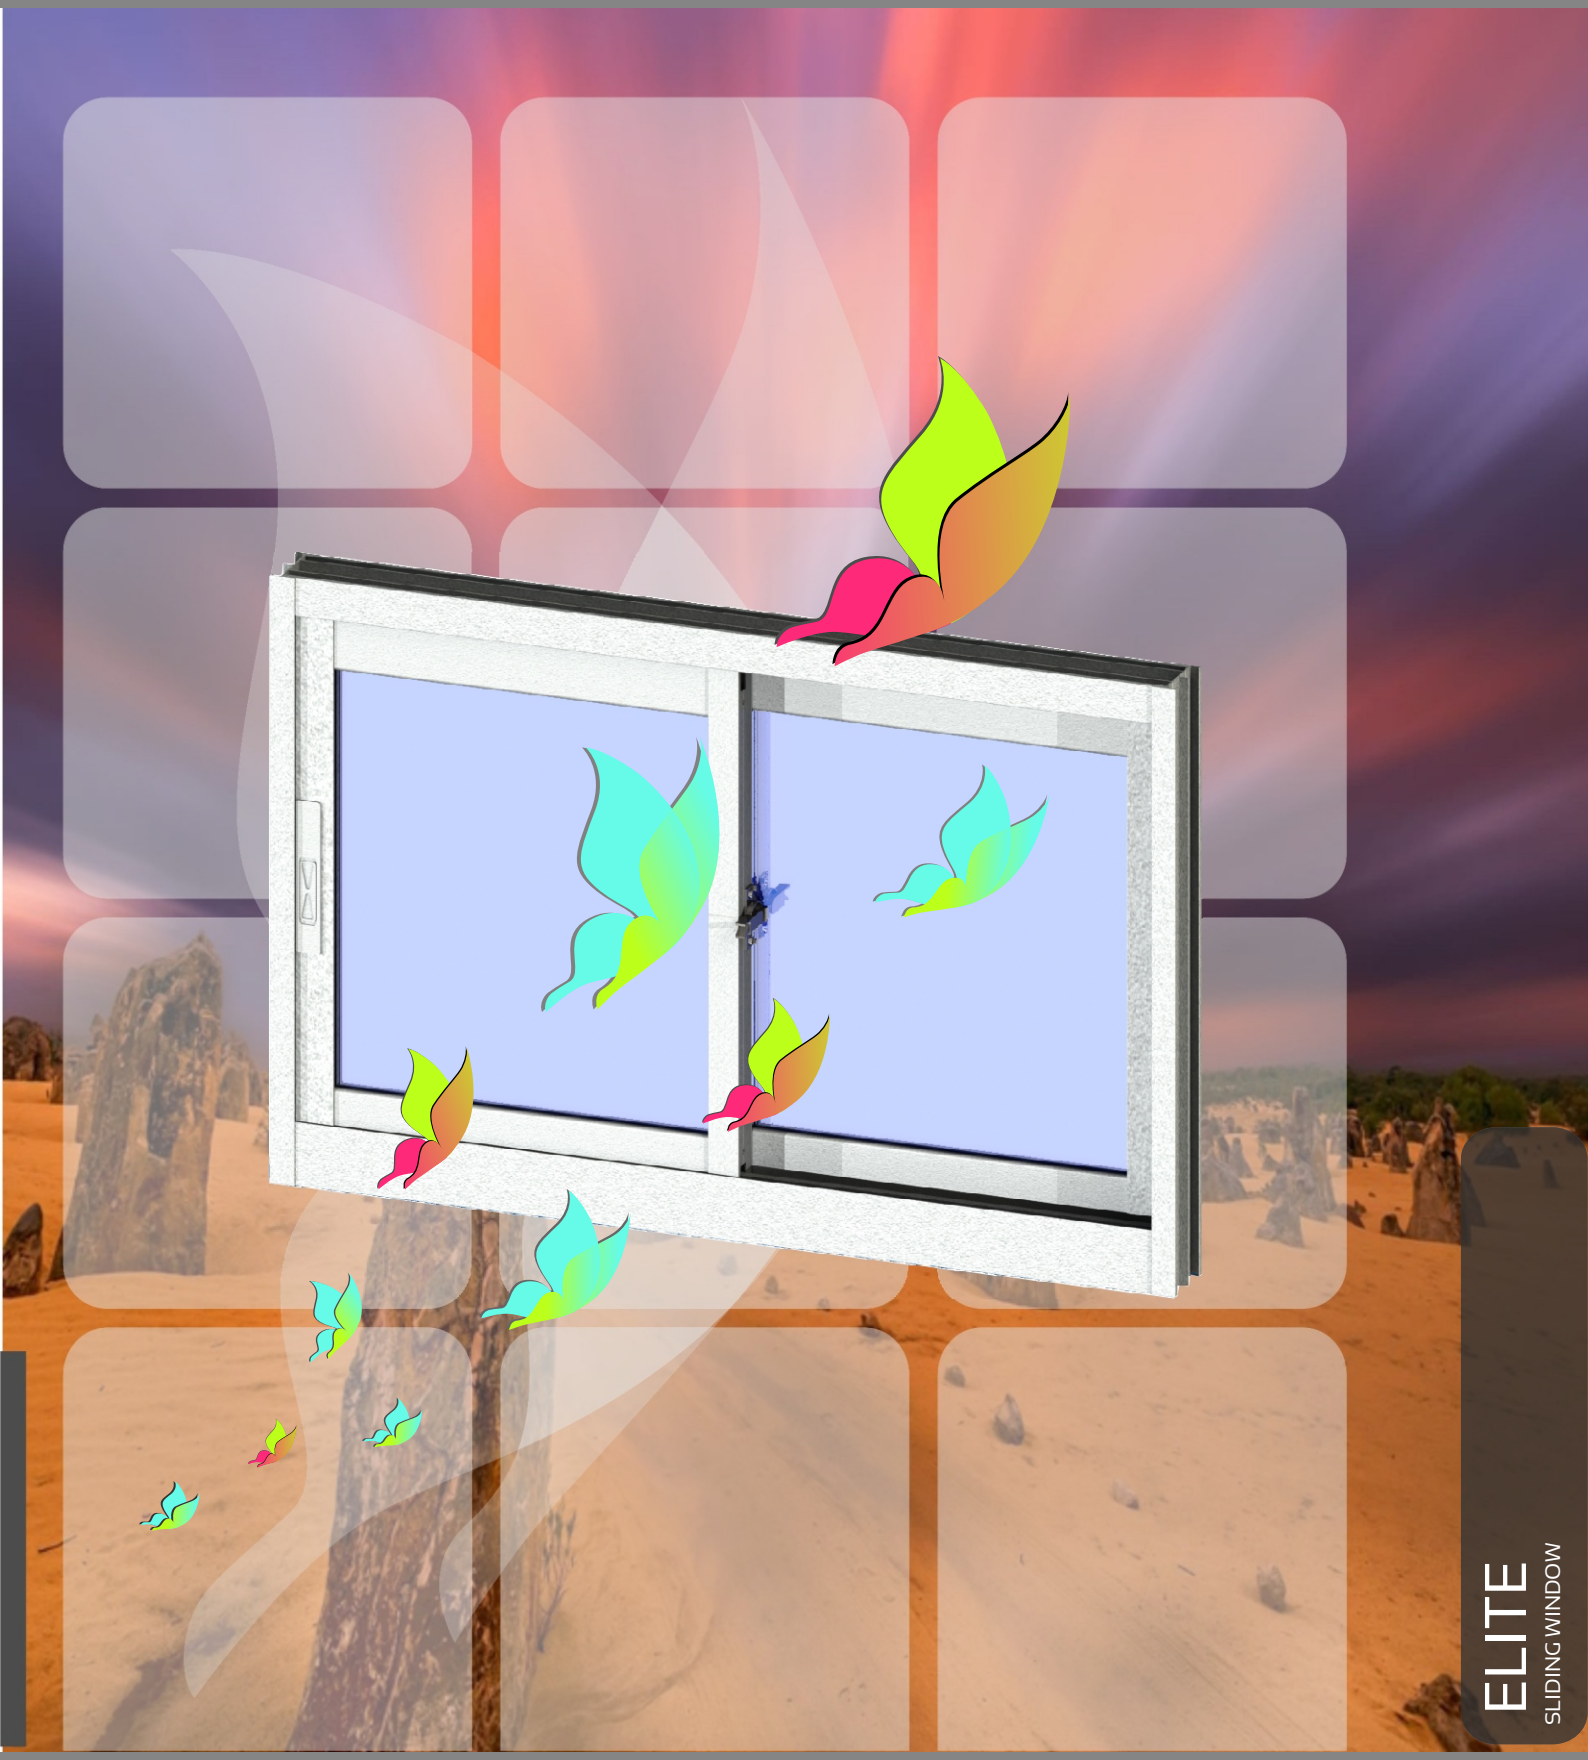

ELITE

SLIDING WINDOW

crealco
creative aluminium

A product of
WISPECO Aluminium

LEGAL DISCLAIMER

General Documentation Disclaimer

This manual is intended as a manufacturing and installation advisory document. For correct specifications, sizing of profiles and structural information please consult the StarFront Application. If the information you require is not available through the StarFront Application, please contact your stockist before proceeding. It is advisable to have all sizing and performance criteria checked by a qualified structural engineer to ensure that the required criteria will be met.

All information, recommendations or advice contained in this documentation is given in good faith to the best of Wispeco's knowledge and is based on current procedures in effect.

Since the actual use of this documentation by the user is beyond the control of Wispeco, such use is within the exclusive responsibility of the user. Wispeco cannot be held responsible for any loss incurred through incorrect or faulty use of this documentation. Training of Wispeco systems is important for ensuring correct procedures in the manufacturing of products.

Great care has been taken to ensure that the information provided is correct.

Ensure that you have the latest available manual. The revision number and date can be checked on the latest StarFront version.

Wispeco will accept no responsibility for any errors and/or omissions, which may have inadvertently occurred.

Specifications concerning products and applications

This manual is based on standard configurations only. As there are many configurations not covered in this manual, contact your stockist with regards to a configuration not represented herein if required.

AutoDesk drawings (CAD Symbol Library) are available on request and can be issued with the consent of the Wispeco Technical Department.

All mechanical joints must be sealed with a **Crealco approved joint sealer**. Failure to correctly seal the joints can affect the performance of the system. Information on joint sealing can be found in the Cleaning & Maintenance Manual available for download from the Wispeco website or from StarFront.

All drawings in the Wispeco Documentation are NOT to scale and are used for illustrative purposes only.

Wispeco will not accept responsibility for the use of standard products since Wispeco does not know where these products are being installed.

The hardware recommended in this documentation is suitable for use in most atmospheric environments. When hardware is used in severe coastal environments the manufacturer of the hardware must be consulted.

The use of non-specified hardware or incorrect mechanical fasteners can adversly affect the mechanical and weathering performance of the system and we strongly advise against deviations. A Wispeco Consultant can advise you of any hardware issues and limitations with regard to this system.

The use of anti-magnetic stainless steel screws and aluminium pop rivets is recommended to reduce galvanic corrosion in harsh environments.

Fixing lugs on frames must be positioned as per the user manual and used in accordance to the AAMSA specifications. When profiles are screwed together the screw centres must also be according to the user manual or as specified by an engineer.

All glass used within Wispeco products must comply with SAGGA regulations. Laminated glass must not stand in water.

By continuing to use this documentation you acknowledge that you understand and accept the legal disclaimer.

This manual must be read in conjunction with the Installation, Cleaning & Maintenance Document and the Performance Certificates for the relevant system. The manual must also be used in conjunction with the design and cutting list from the latest version of StarFront.

Disclaimer: The right to make alterations is reserved
© 2013 Wispeco (Pty) Ltd, All Rights Reserved

ELITE SLIDING WINDOW

ELITE
SLIDING WINDOW

PRODUCT MANUAL

ELITE SLIDING WINDOW

INDEX

Legal Disclaimer i

Index 1

General System

Profile Identification 2
Hardware Components 3
Size Limitation Guide 4
Typical Configurations 5
Fixing Details 6
Cross-Sectional Detail
- Cutting Sizes 7-8
- H/D Interlocker 9
- XXXX Configuration 10

Assembly Detail
- Outer Frame Component 11
- Sash Frame Component with Lock 12
- Sash Frame Component with Catch and Keep 13

Bottom Roller Detail 14
Sidelight Bottom Rail
- Casement 30.5 15
- Casement 28 16

Machining Detail
- Meeting Stile 17
- for Sill Drainage 18-21
- Jamb Rail 22
- Lock Stile 23
- Interlock 24

Assembly Detail
- Head Sill Rail 25
- Latch 26
- Anti-Lift Block 27

Sub-Light Detail 28
Side Light Adaptor
- Casement 28 29
- Casement 30.5 30
- Casement 38 31

Fitting of Sill Extension for A2 and A3 32
Glazing Procedure 33

crealco

This manual must be read in conjunction with the Installation, Cleaning & Maintenance Document and the Performance Certificates for the relevant system. The manual must also be used in conjunction with the design and cutting list from the latest version of StarFront.

Disclaimer: The right to make alterations is reserved
© 2013 Wispeco (Pty) Ltd, All Rights Reserved

Profile Identification

Elite Window Profiles

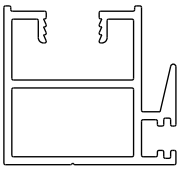

DIE No. W55168 | Elite Interlocker

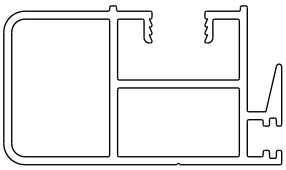

DIE No. W55167 | Elite Heavy Duty Interlocker

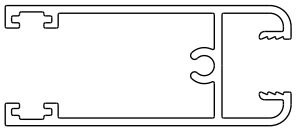

DIE No. W31082 | Elite Sash Top&Bottom

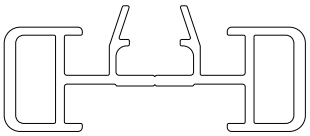

DIE No. W57553 | Elite Meeting Stile

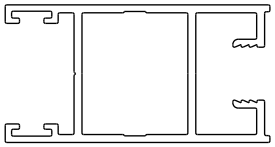

DIE No. W55166 | Elite Lock Stile

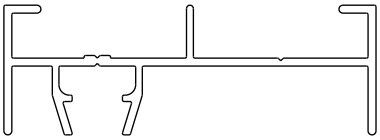

DIE No. W31080 | Elite Frame Jamb

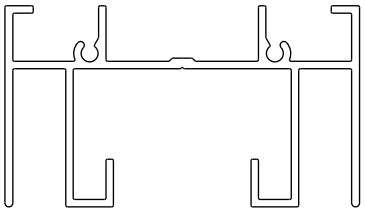

DIE No. W31079 | Elite Frame Head

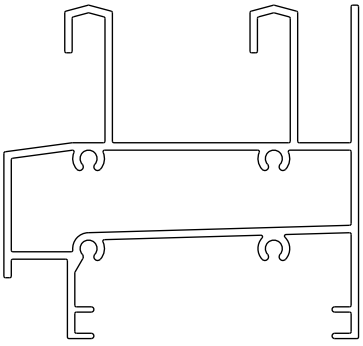

DIE No. W55169 | Elite Frame Sill

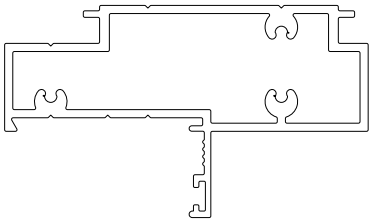

DIE No. W57363 | Elite Sub Light

This manual must be read in conjunction with the Installation, Cleaning & Maintenance Document and the Performance Certificates for the relevant system. The manual must also be used in conjunction with the design and cutting list from the latest version of StarFront.

Disclaimer: The right to make alterations is reserved
© 2013 Wispeco (Pty) Ltd, All Rights Reserved

Hardware Components

RECOMMENDED ELITE SLIDING WINDOW COMPONENTS

All hardware is available through our Stockists as well as through Crealco Components, and can be viewed on www.crealco-components.com

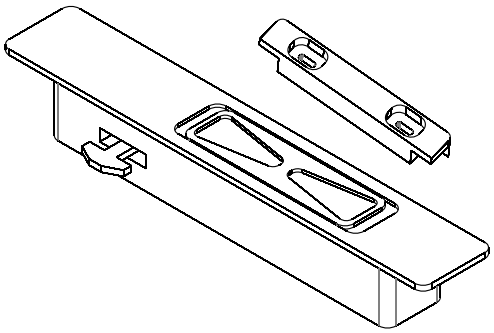

HFP-HWIK-NAT
HFP-HWIK-WHT
HFP-HWIK-BLK
Handle

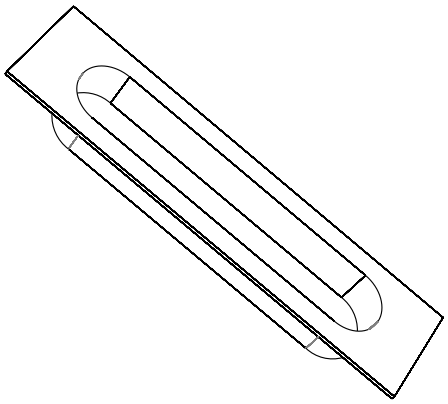

HPL-MFP-BLK
HPL-MFP-WHT
Mini Flush Pull Handle

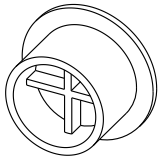

PEX-NRV
Non-Return Valve

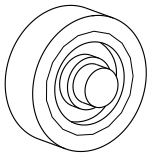

SDW-ROLL
Roller Only

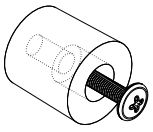

SGD-VST + FSP-0820P-SS
Stopper With Screw

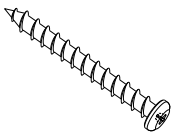

FSP-0830P-SS
P/Head POSI
8x30 S/S Screw



GFP-6790
Finpile

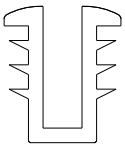

GCH-H33
Channel H33

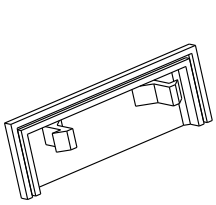

PEX-WDC
Drainage Cover

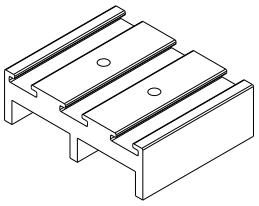

SGD-AL
Draught Excluder Anti Lift

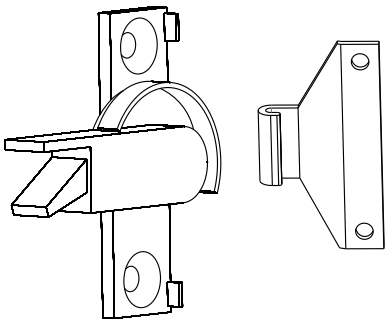

HCC-CC
Cam Catch

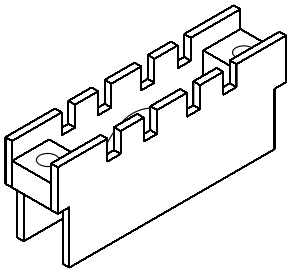

SDW-RH
Roller Housing

This manual must be read in conjunction with the Installation, Cleaning & Maintenance Document and the Performance Certificates for the relevant system. The manual must also be used in conjunction with the design and cutting list from the latest version of StarFront.

Disclaimer: The right to make alterations is reserved
© 2013 Wispeco (Pty) Ltd, All Rights Reserved

Size Limitation Guide

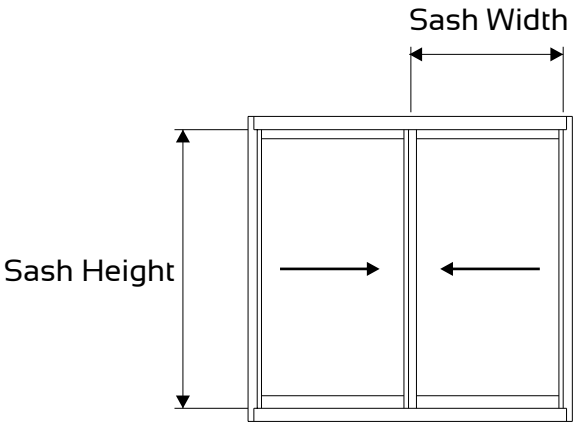

MAXIMUM SASH WIDTH = 1500mm

MAXIMUM SASH HEIGHT = 1800mm

(SEE LIMITATION CHARTS)

Disclaimer: The right to make alterations is reserved
© 2013 Wispeco (Pty) Ltd, All Rights Reserved

Typical Configuration

XX CONFIGURATION

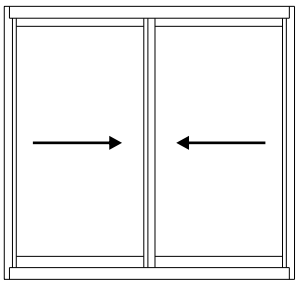

XOX EQUAL PANE CONFIGURATION

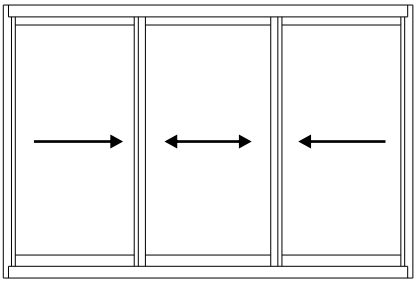

XOX UNEQUAL PANE CONFIGURATION

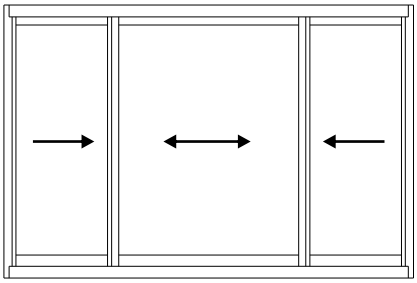

XXXX CONFIGURATION

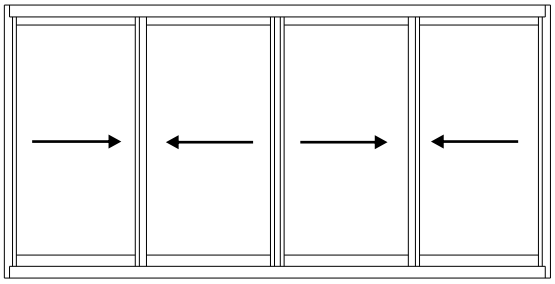

This manual must be read in conjunction with the Installation, Cleaning & Maintenance Document and the Performance Certificates for the relevant system. The manual must also be used in conjunction with the design and cutting list from the latest version of StarFront.

Disclaimer: The right to make alterations is reserved
© 2013 Wispeco (Pty) Ltd, All Rights Reserved

Fixing Details

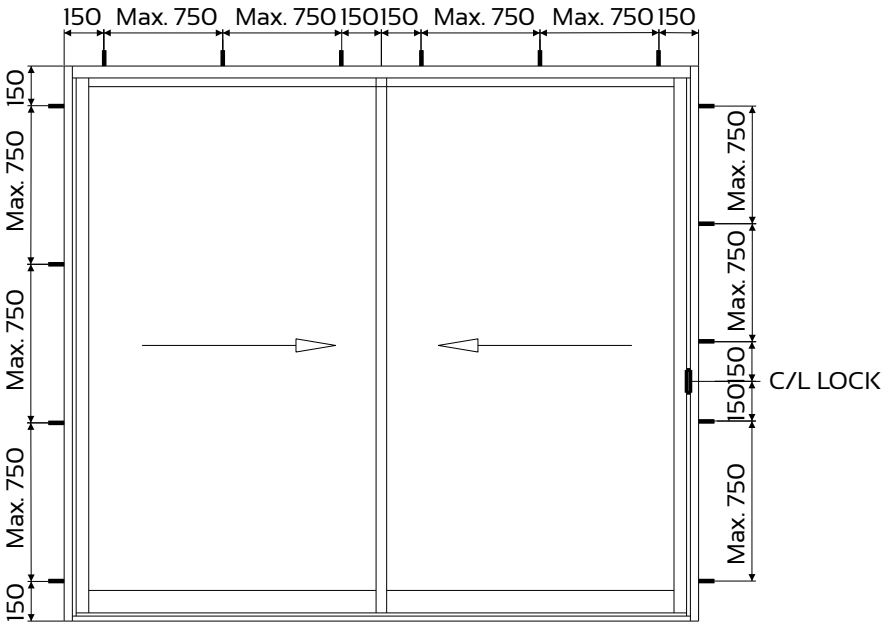

**TYPICAL OX SLIDING DOOR &
HORIZONTAL SLIDING WINDOW**

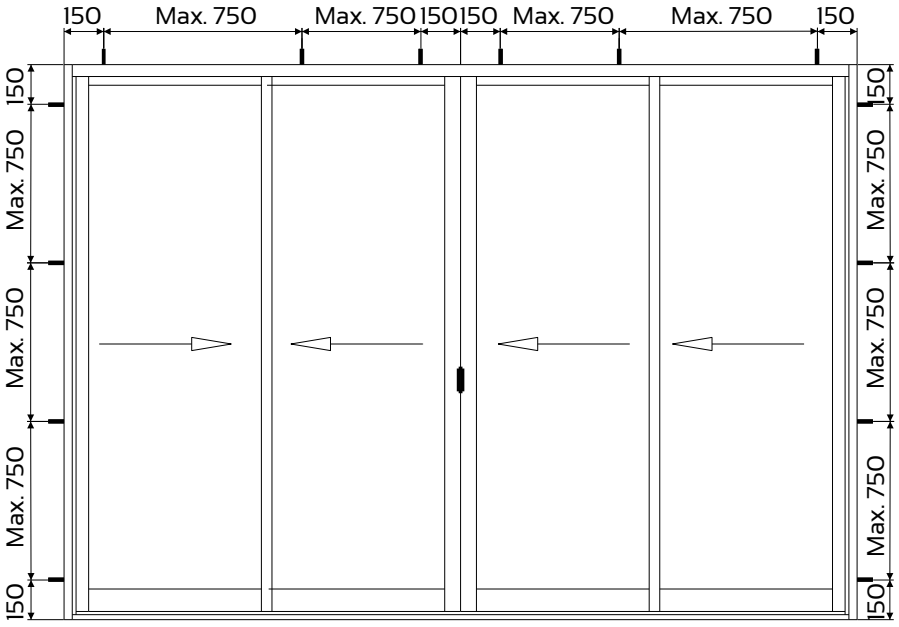

**TYPICAL OXXO SLIDING DOOR &
HORIZONTAL SLIDING WINDOW**

crealco

This manual must be read in conjunction with the Installation, Cleaning & Maintenance Document and the Performance Certificates for the relevant system. The manual must also be used in conjunction with the design and cutting list from the latest version of StarFront.

Disclaimer: The right to make alterations is reserved
© 2013 Wispeco (Pty) Ltd, All Rights Reserved

Cross-Sectional Detail

Cutting Sizes

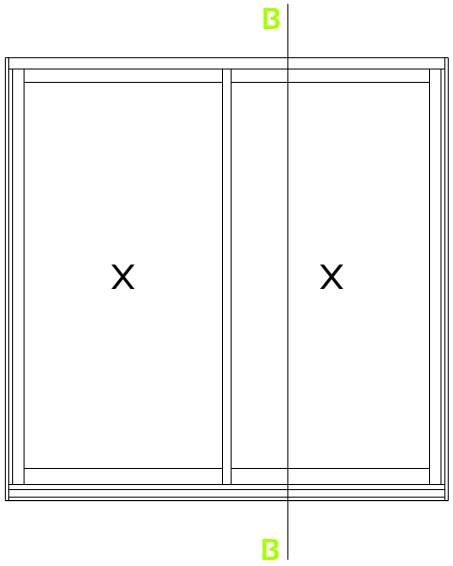

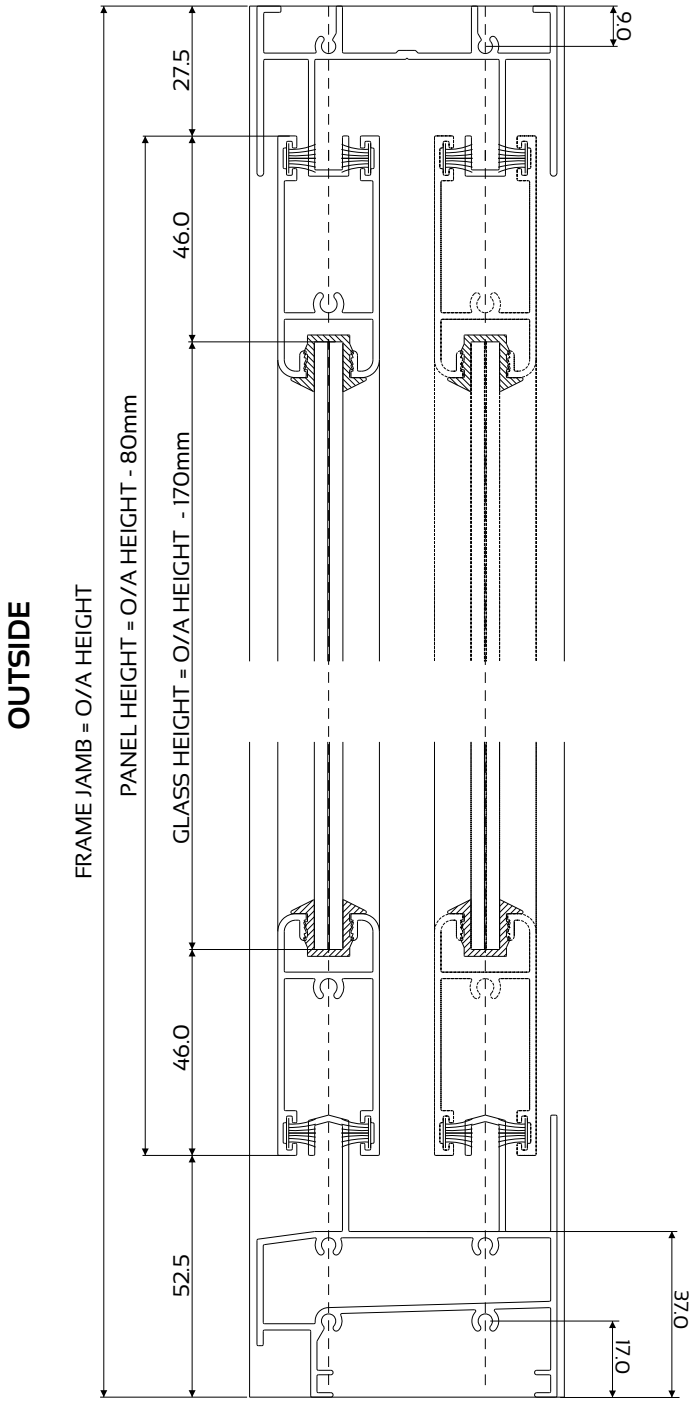

SECTION B-B
Section not to scale

This manual must be read in conjunction with the Installation, Cleaning & Maintenance Document and the Performance Certificates for the relevant system. The manual must also be used in conjunction with the design and cutting list from the latest version of StarFront.

Disclaimer: The right to make alterations is reserved
© 2013 Wispeco (Pty) Ltd, All Rights Reserved

Cross-Sectional Detail

Cutting Sizes

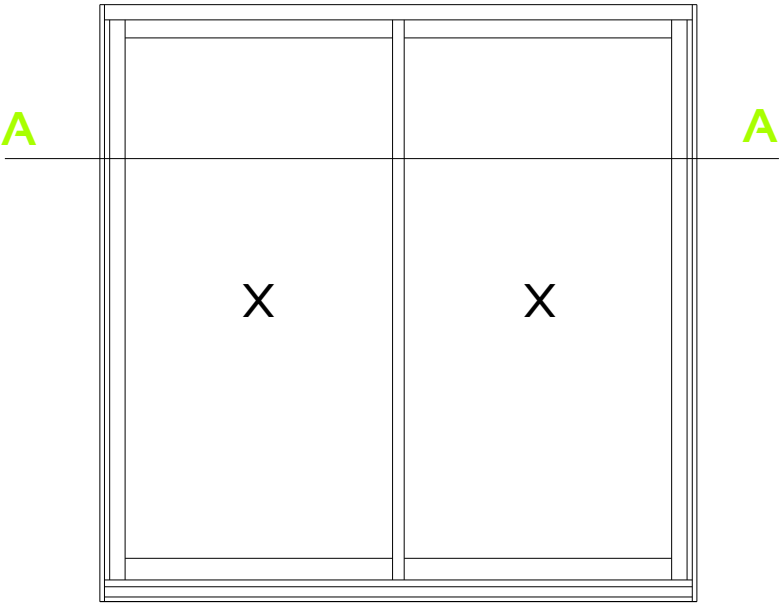

SECTION A-A
Section not to scale

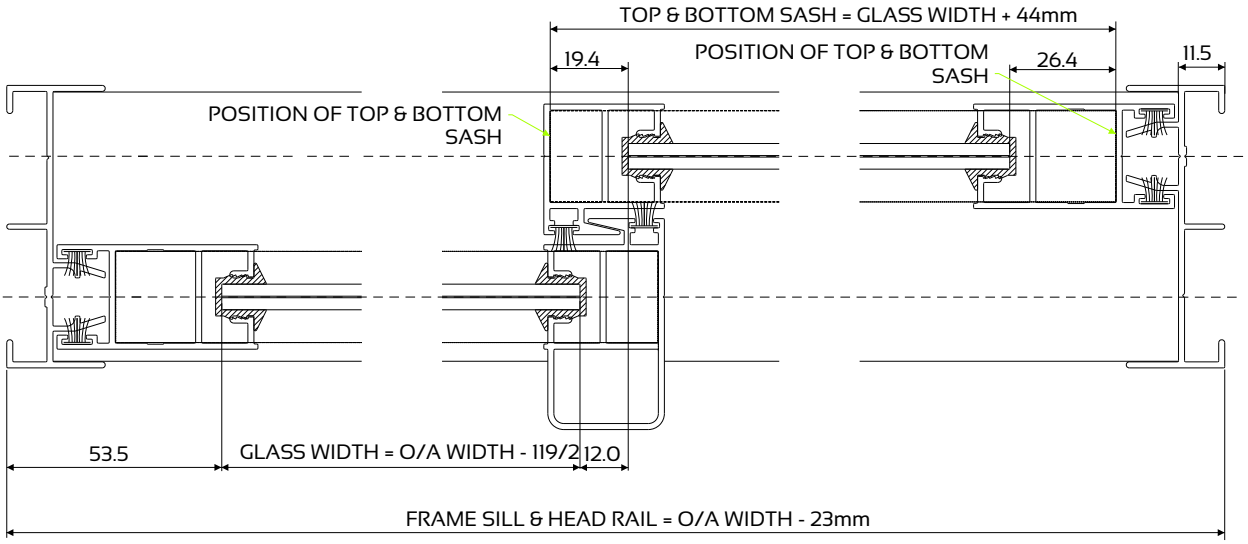

OUTSIDE

This manual must be read in conjunction with the Installation, Cleaning & Maintenance Document and the Performance Certificates for the relevant system. The manual must also be used in conjunction with the design and cutting list from the latest version of StarFront.

Disclaimer: The right to make alterations is reserved
© 2013 Wispeco (Pty) Ltd, All Rights Reserved

Cross-Sectional Detail

H/D Interlocker

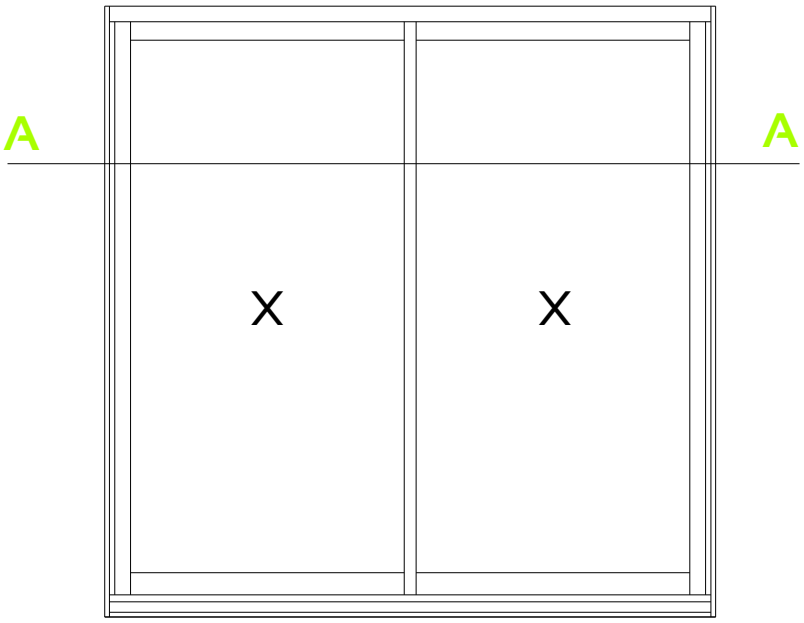

SECTION A-A
Section not to scale

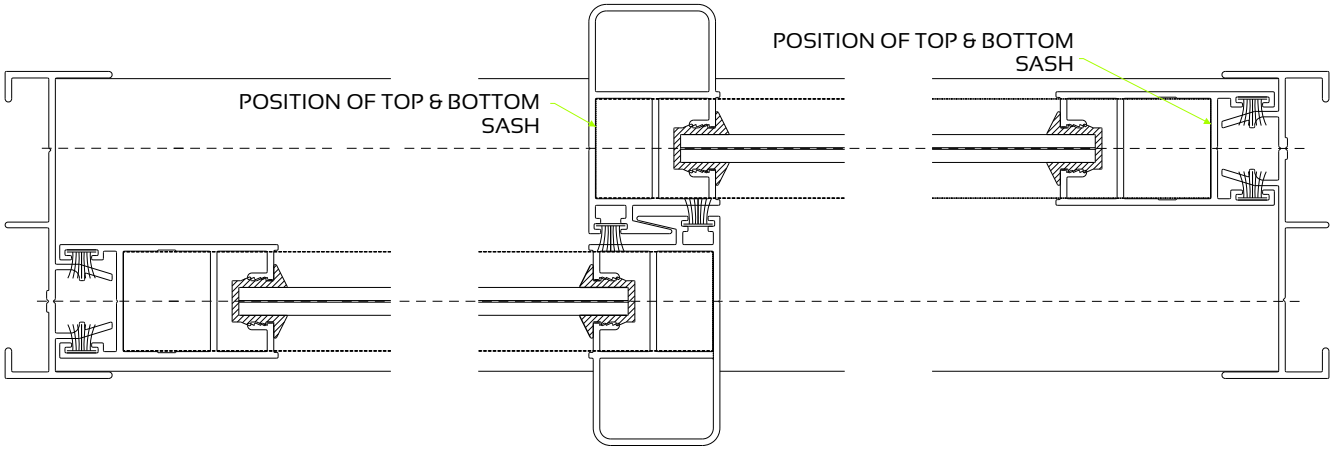

OUTSIDE

This manual must be read in conjunction with the Installation, Cleaning & Maintenance Document and the Performance Certificates for the relevant system. The manual must also be used in conjunction with the design and cutting list from the latest version of StarFront.

Disclaimer: The right to make alterations is reserved
© 2013 Wispeco (Pty) Ltd, All Rights Reserved

Cross-Sectional Detail

XXXX Configuration

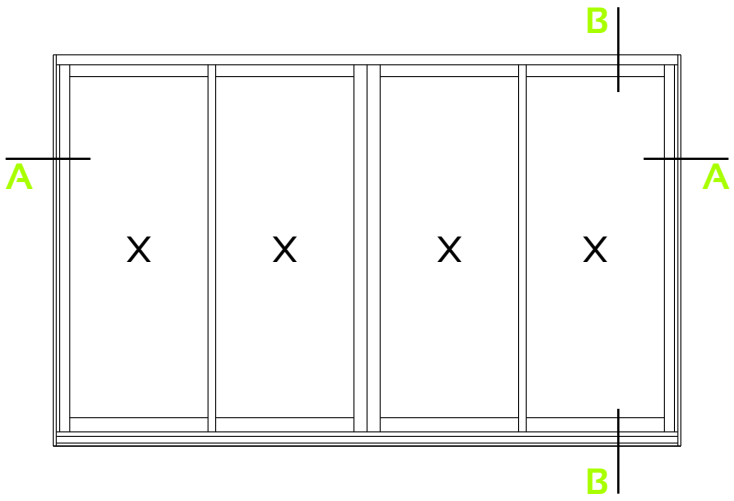

SECTION B-B
Section not to scale

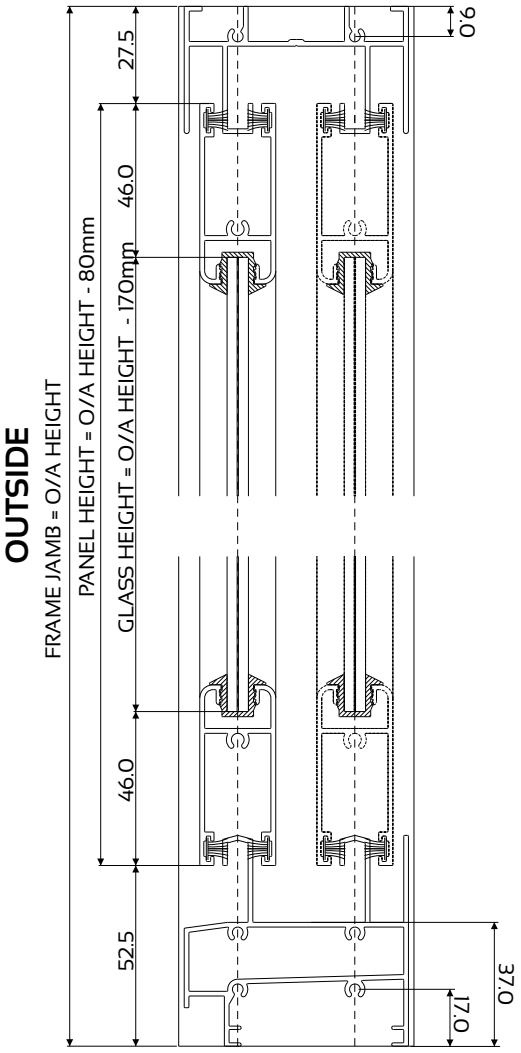

SECTION A-A
Section not to scale

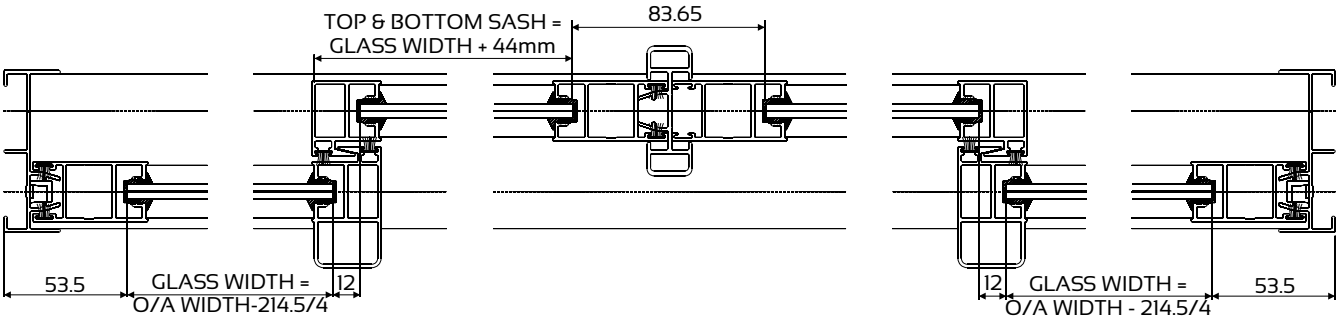

OUTSIDE

This manual must be read in conjunction with the Installation, Cleaning & Maintenance Document and the Performance Certificates for the relevant system. The manual must also be used in conjunction with the design and cutting list from the latest version of StarFront.

Disclaimer: The right to make alterations is reserved
© 2013 Wispeco (Pty) Ltd, All Rights Reserved

Assembly Detail

Outer Frame Component

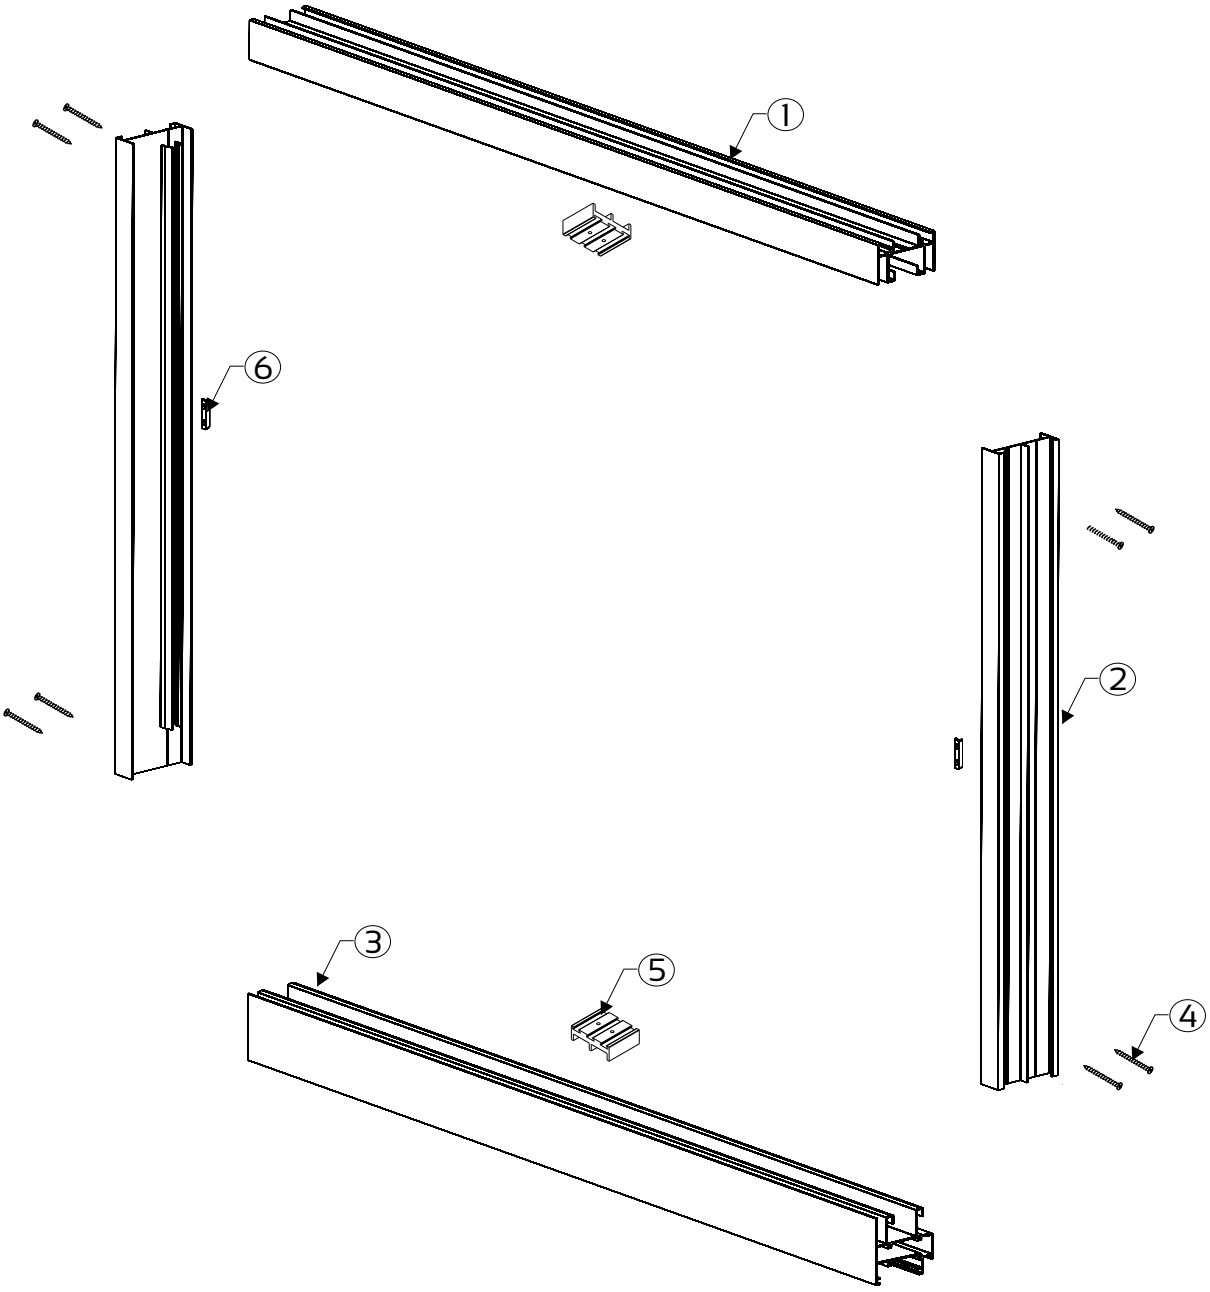

System Profiles

ITEM	QTY	DIE No.	DESCRIPTION
1	1	W31079	Elite Frame Head
2	2	W31080	Elite Frame Jamb
3	1	W55169	Elite Frame Sill

Hardware

ITEM	QTY	COMPONENT DESCRIPTION
4	8	8x30 P/Head POSI S/S Screw
5	2	Draught Excluder
6	2	Handle Catch & Keep

crealco

This manual must be read in conjunction with the Installation, Cleaning & Maintenance Document and the Performance Certificates for the relevant system. The manual must also be used in conjunction with the design and cutting list from the latest version of StarFront.

Disclaimer: The right to make alterations is reserved
© 2013 Wispeco (Pty) Ltd, All Rights Reserved

Assembly Detail

Sash Frame Component with Lock

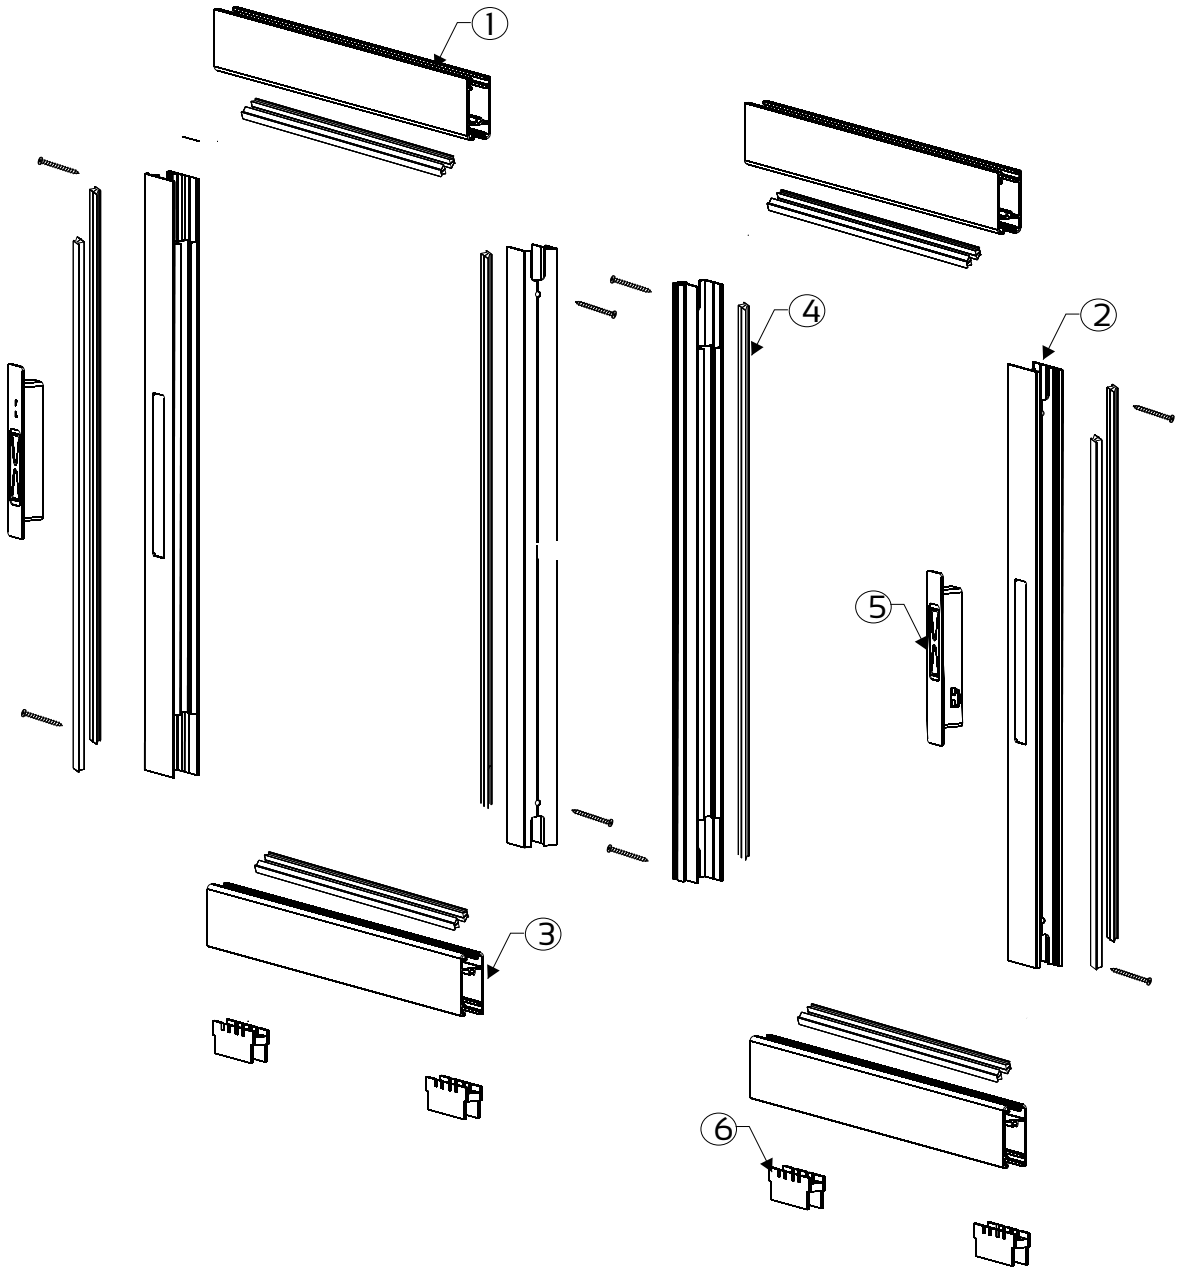

System Profiles

ITEM	QTY	DESCRIPTION
1	2	Elite Sash Frame Head
2	2	Elite Sash Frame Jamb
3	1	Elite Sash Frame Sill

Hardware

ITEM	QTY	COMPONENT DESCRIPTION
4	8	Finpile
5	1	Lock
6	4	Rollers

This manual must be read in conjunction with the Installation, Cleaning & Maintenance Document and the Performance Certificates for the relevant system. The manual must also be used in conjunction with the design and cutting list from the latest version of StarFront.

Disclaimer: The right to make alterations is reserved
© 2013 Wispeco (Pty) Ltd, All Rights Reserved

Assembly Detail

Sash Frame Component with Catch and Keep

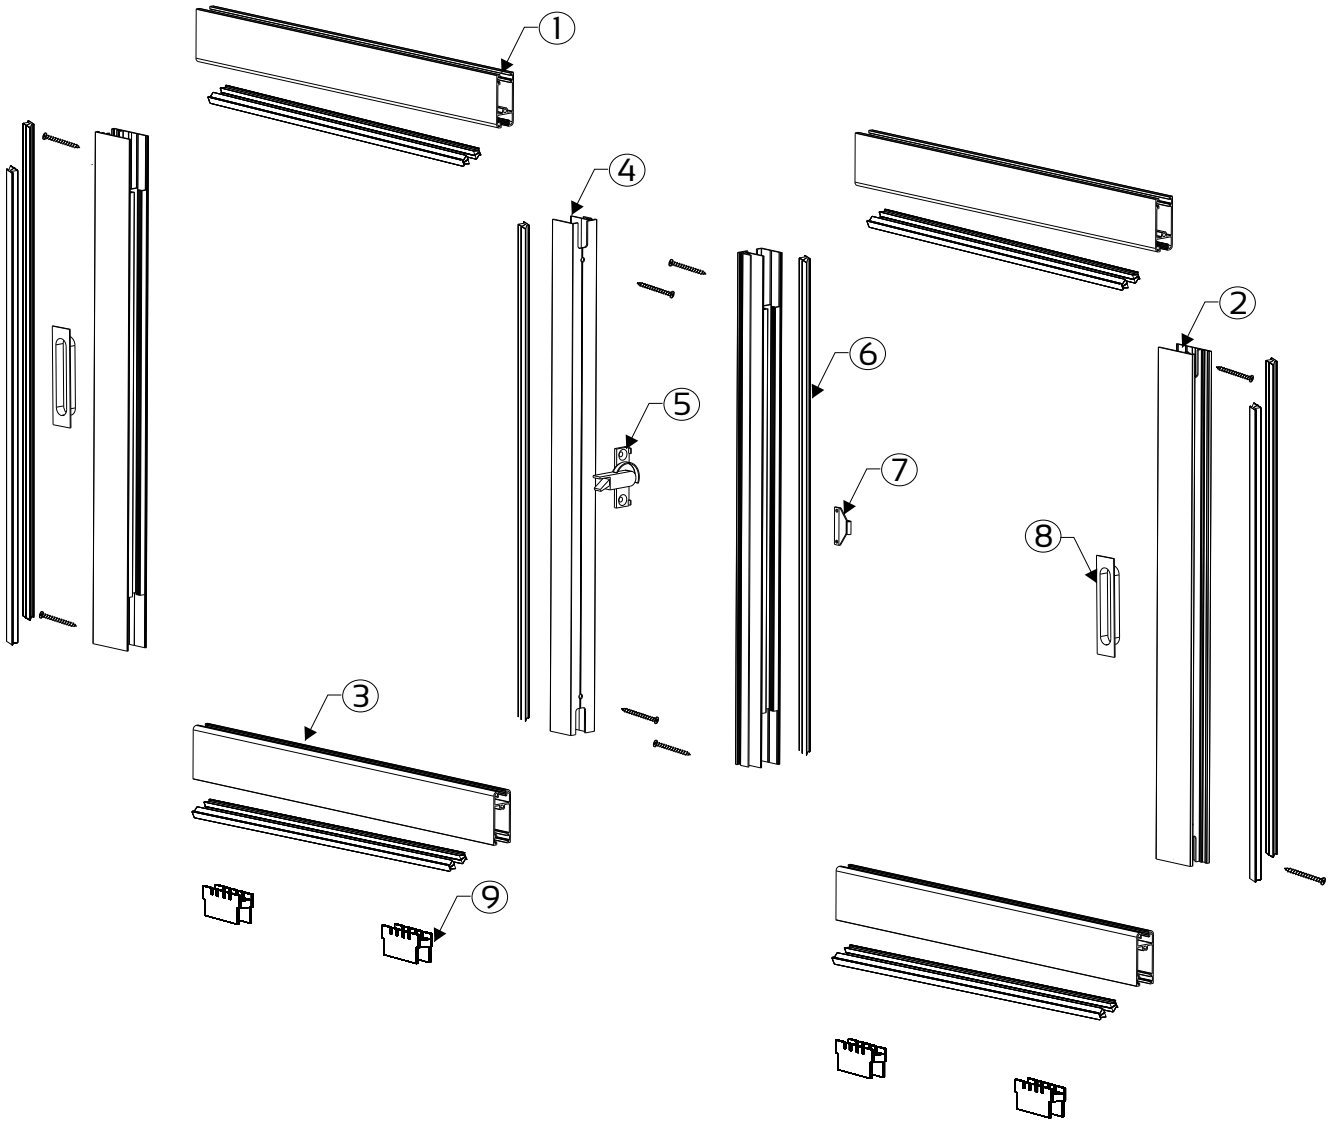

System Profiles

ITEM	QTY	DESCRIPTION
1	2	Elite Sash Frame Head
2	2	Elite Sash Frame Jamb
3	2	Elite Sash Frame Sill
4	2	Elite Sash Interlocker

Hardware

ITEM	QTY	COMPONENT DESCRIPTION
5	1	Catch
6	8	Finpile
7	1	Keep
8	1	Mini Flush Pull Handle
9	4	Rollers

crealco

This manual must be read in conjunction with the Installation, Cleaning & Maintenance Document and the Performance Certificates for the relevant system. The manual must also be used in conjunction with the design and cutting list from the latest version of StarFront.

Disclaimer: The right to make alterations is reserved
© 2013 Wispeco (Pty) Ltd, All Rights Reserved

Bottom Roller Detail

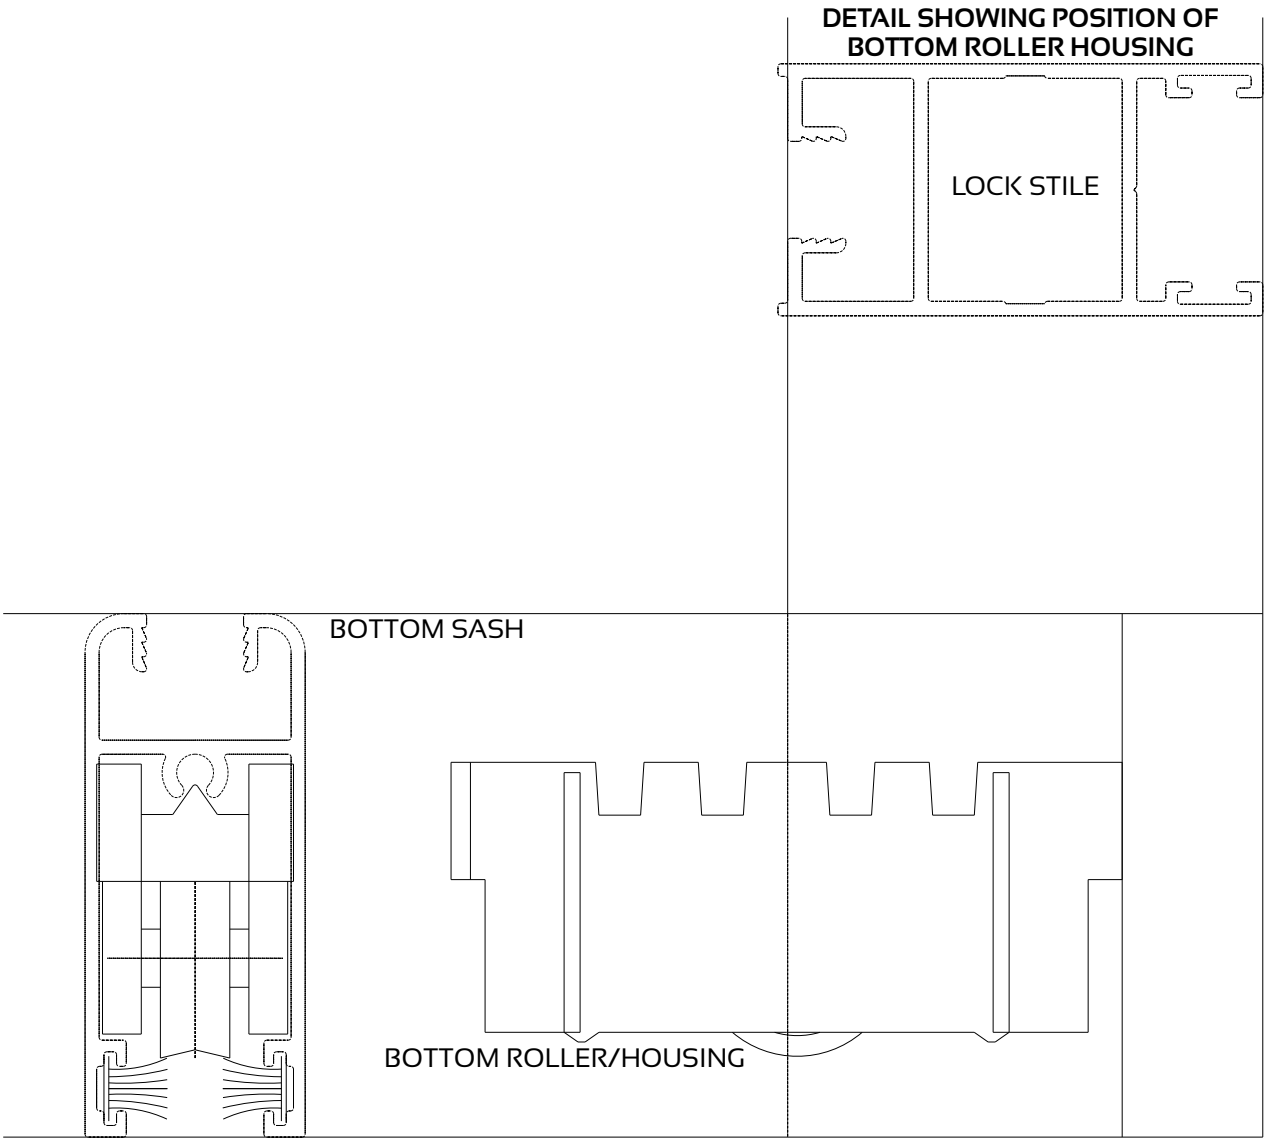

This manual must be read in conjunction with the Installation, Cleaning & Maintenance Document and the Performance Certificates for the relevant system. The manual must also be used in conjunction with the design and cutting list from the latest version of StarFront.

Disclaimer: The right to make alterations is reserved
© 2013 Wispeco (Pty) Ltd, All Rights Reserved

Sidelight Bottom Rail

Casement 30.5

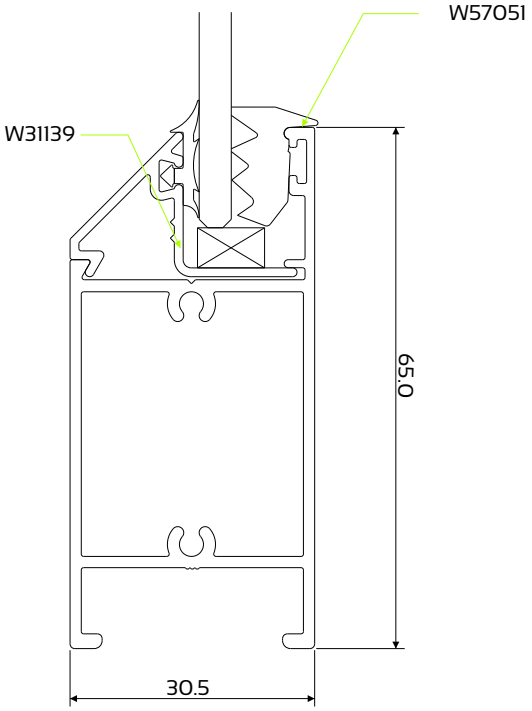

CASEMENT 30.5 SIDELIGHT BOTTOM RAIL

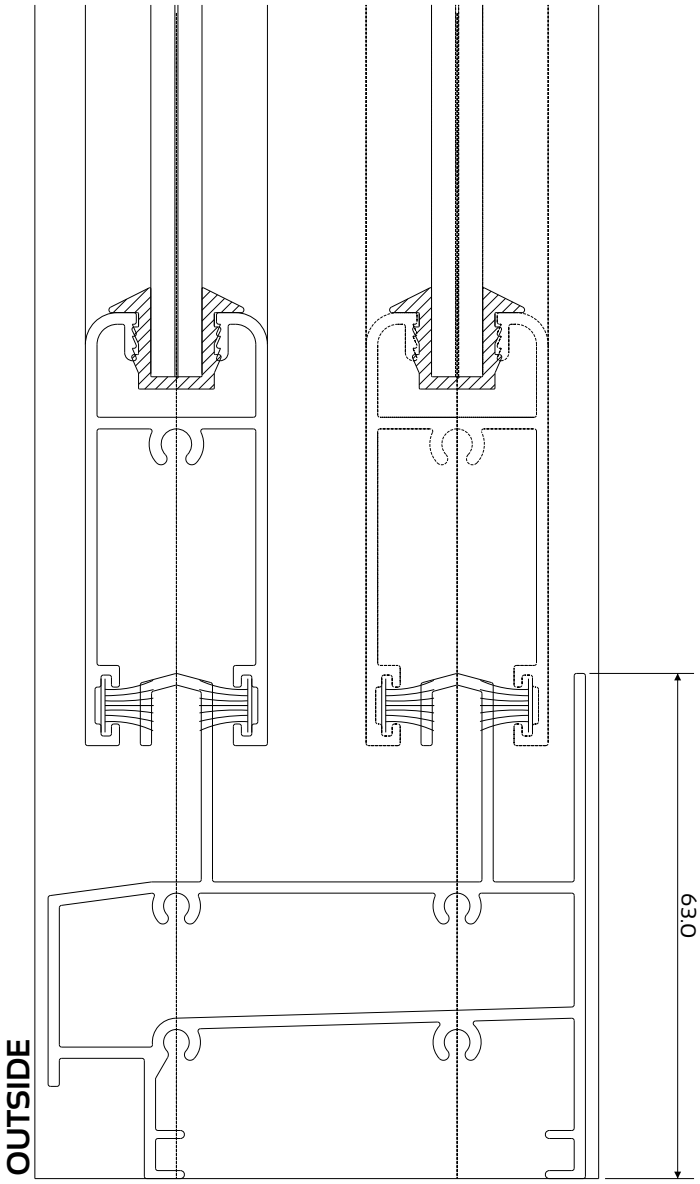

This manual must be read in conjunction with the Installation, Cleaning & Maintenance Document and the Performance Certificates for the relevant system. The manual must also be used in conjunction with the design and cutting list from the latest version of StarFront.

Disclaimer: The right to make alterations is reserved
© 2013 Wispeco (Pty) Ltd, All Rights Reserved

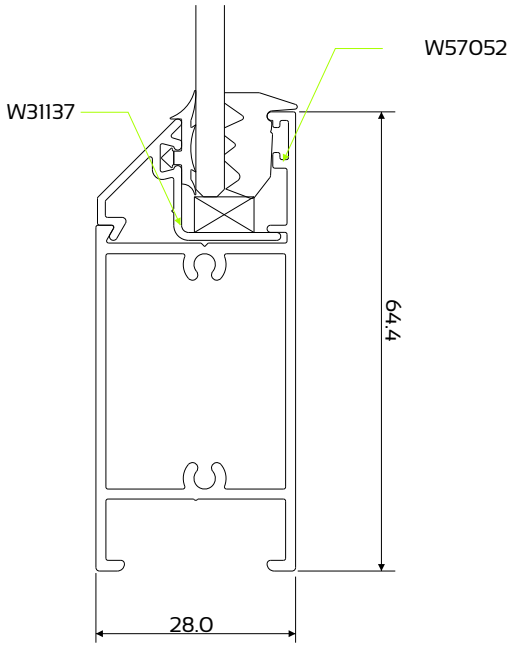

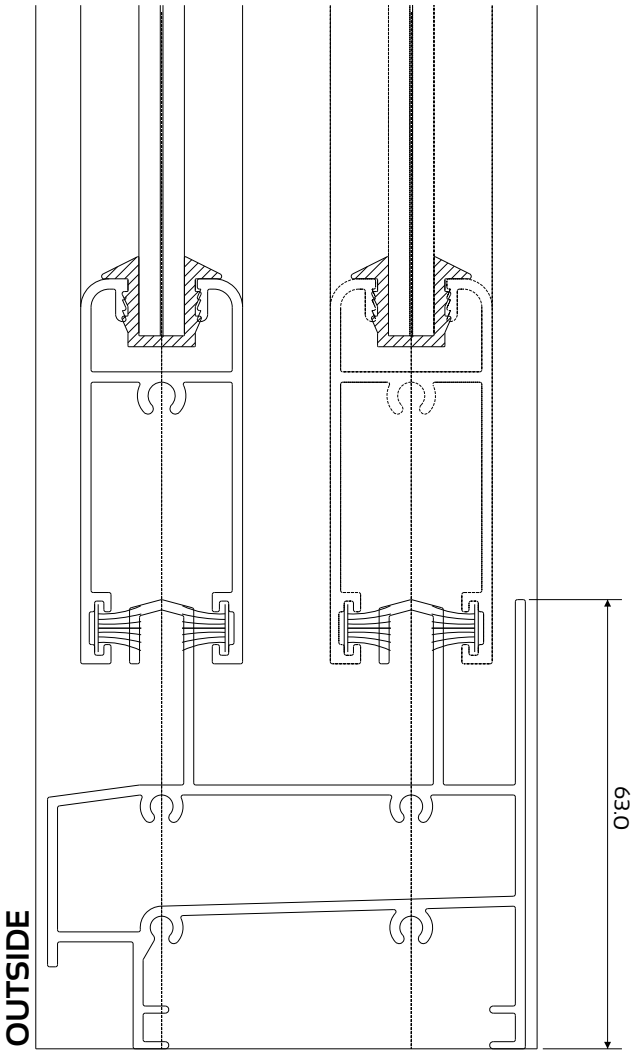

CASEMENT 28 SIDELIGHT BOTTOM RAIL

Disclaimer: The right to make alterations is reserved
© 2013 Wispeco (Pty) Ltd, All Rights Reserved

Machining Detail

Meeting Stile

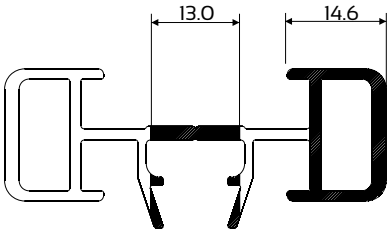

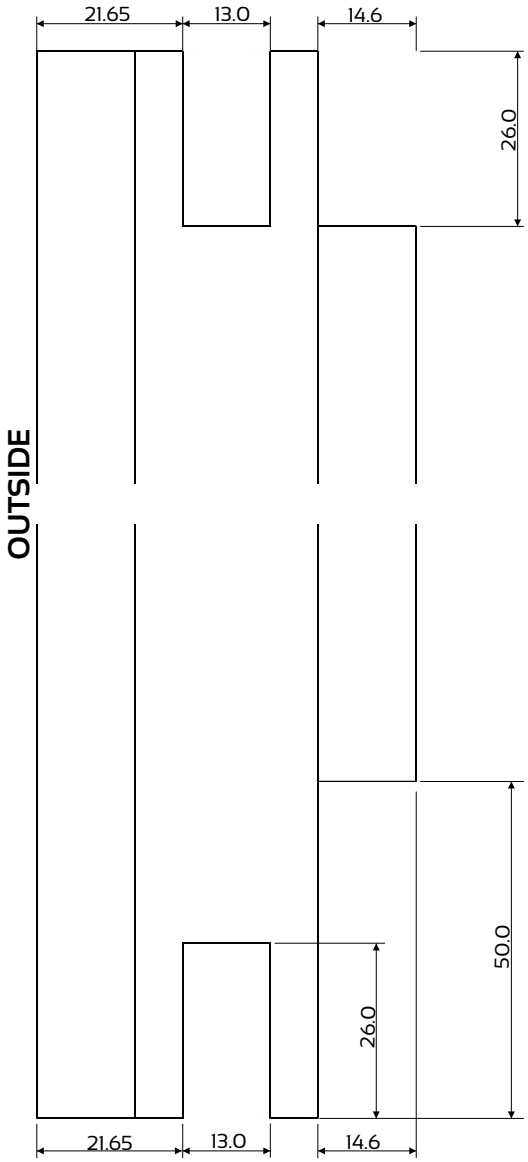

This manual must be read in conjunction with the Installation, Cleaning & Maintenance Document and the Performance Certificates for the relevant system. The manual must also be used in conjunction with the design and cutting list from the latest version of StarFront.

Disclaimer: The right to make alterations is reserved
© 2013 Wispeco (Pty) Ltd, All Rights Reserved

Machining Detail

for Sill Drainage

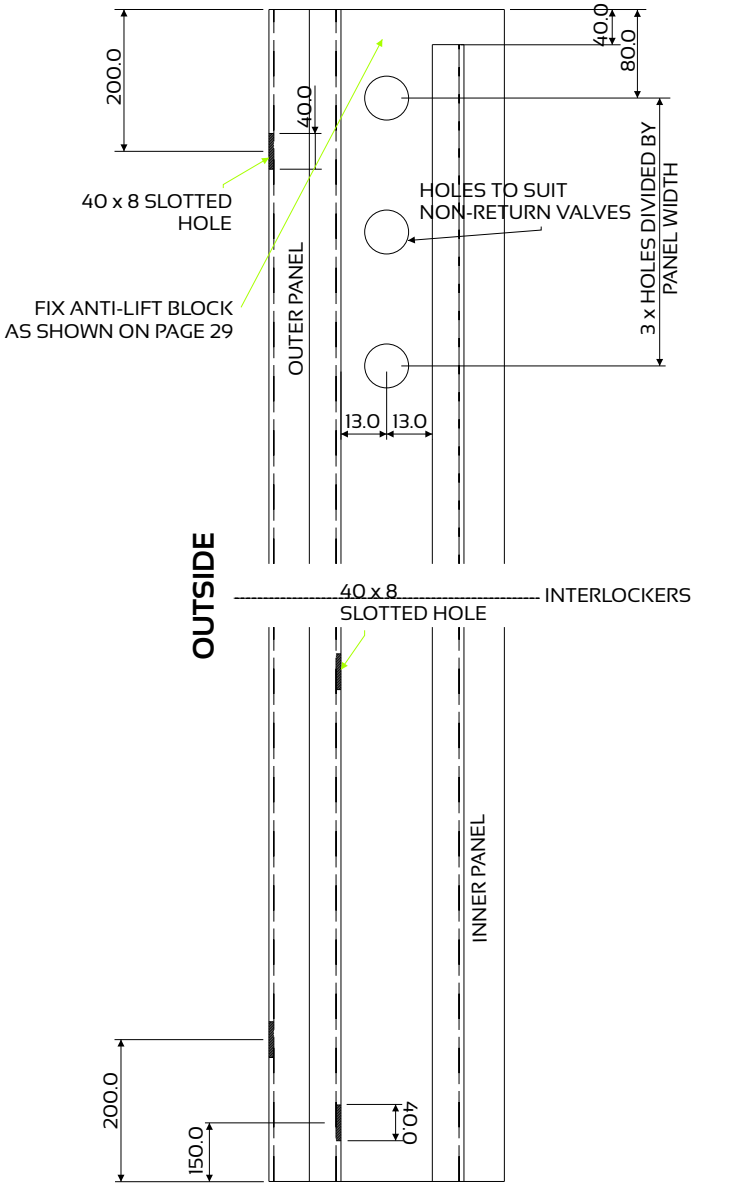

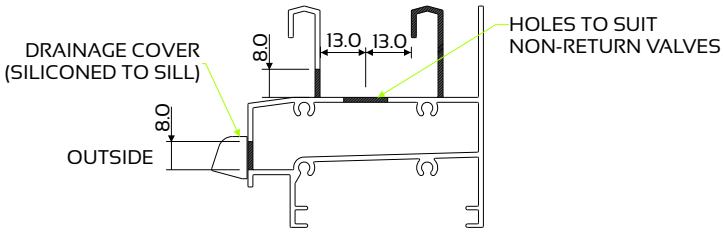

NOTE:
FOR SLIDING WINDOWS
OVER 1200mm WIDE,
3 x DRAINAGE COVERS TO BE ADDED

DRAINAGE FOR XX CONFIGURATION

This manual must be read in conjunction with the Installation, Cleaning & Maintenance Document and the Performance Certificates for the relevant system. The manual must also be used in conjunction with the design and cutting list from the latest version of StarFront.

Disclaimer: The right to make alterations is reserved
© 2013 Wispeco (Pty) Ltd, All Rights Reserved

Machining Detail

for Sill Drainage

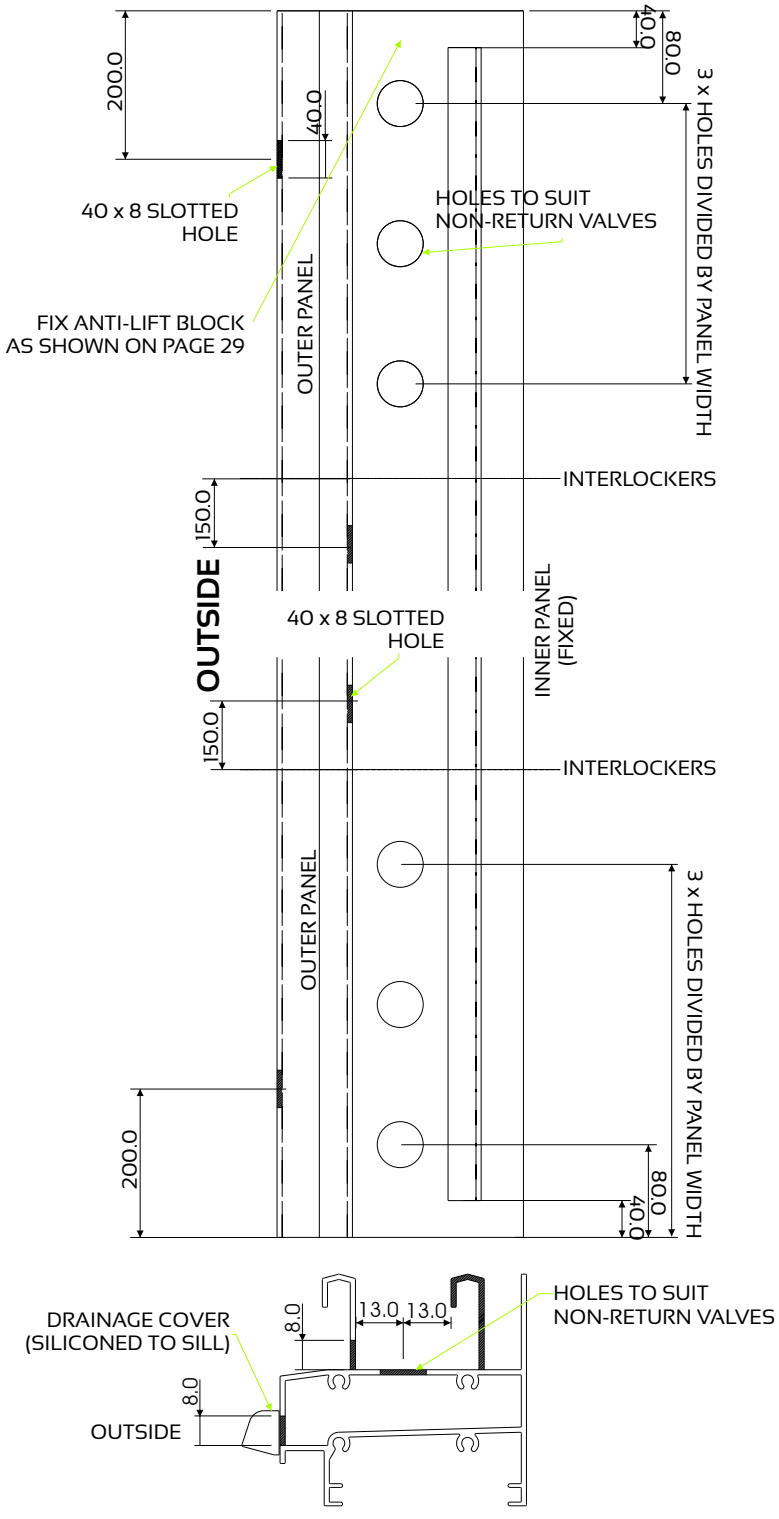

NOTE:
FOR SLIDING WINDOWS
OVER 1200mm WIDE,
3 x DRAINAGE COVERS TO BE ADDED

DRAINAGE FOR XOX CONFIGURATION

This manual must be read in conjunction with the Installation, Cleaning & Maintenance Document and the Performance Certificates for the relevant system. The manual must also be used in conjunction with the design and cutting list from the latest version of StarFront.

Disclaimer: The right to make alterations is reserved
© 2013 Wispeco (Pty) Ltd, All Rights Reserved

Machining Detail

for Sill Drainage

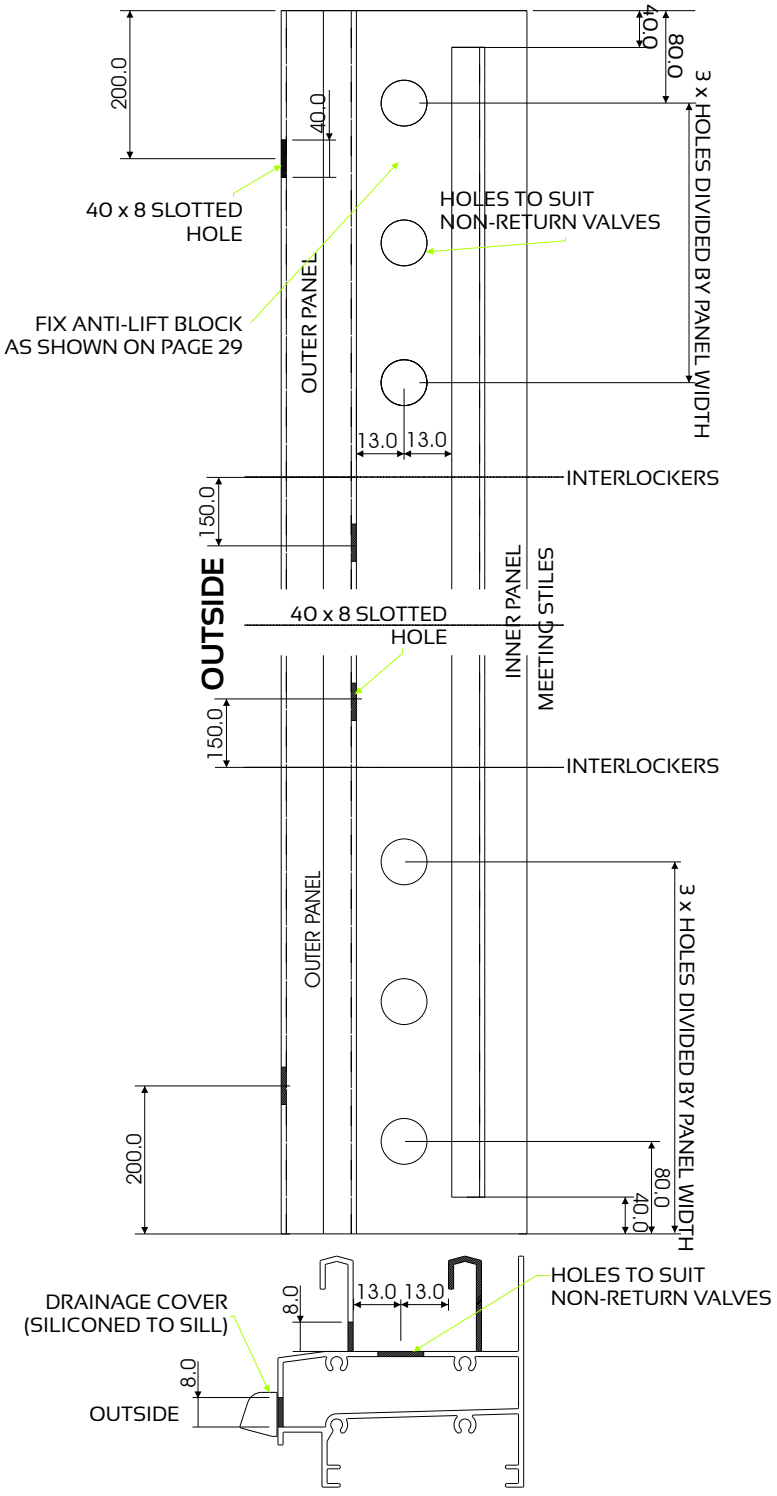

NOTE:
FOR SLIDING WINDOWS
OVER 1200mm WIDE,
3 x DRAINAGE COVERS TO BE ADDED

DRAINAGE FOR OXXO CONFIGURATION

This manual must be read in conjunction with the Installation, Cleaning & Maintenance Document and the Performance Certificates for the relevant system. The manual must also be used in conjunction with the design and cutting list from the latest version of StarFront.

Disclaimer: The right to make alterations is reserved
© 2013 Wispeco (Pty) Ltd, All Rights Reserved

Machining Detail

for Sill Drainage

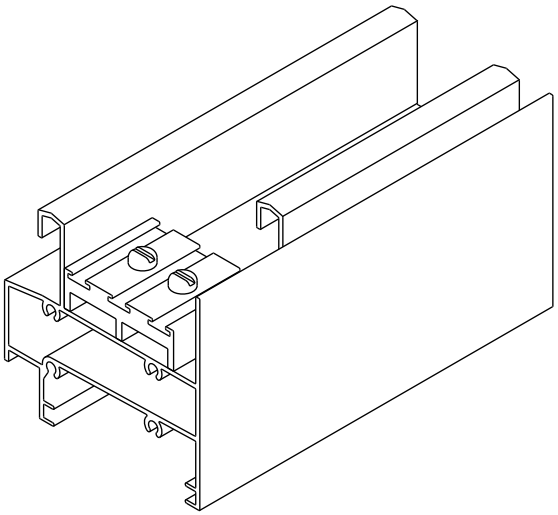

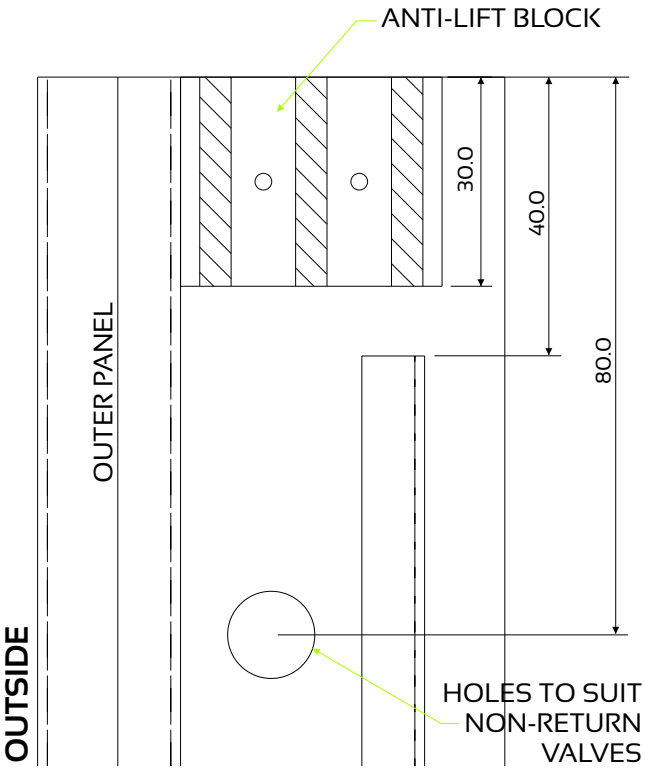

FIT GFP-6790 FINSEAL ONTO ANTI-LIFT BLOCKS,
ENSURE FINSEAL IS FIRMLY FITTED.

SILICONE SEALANT TO BE APPLIED
TO ALL MECHANICAL JOINTS

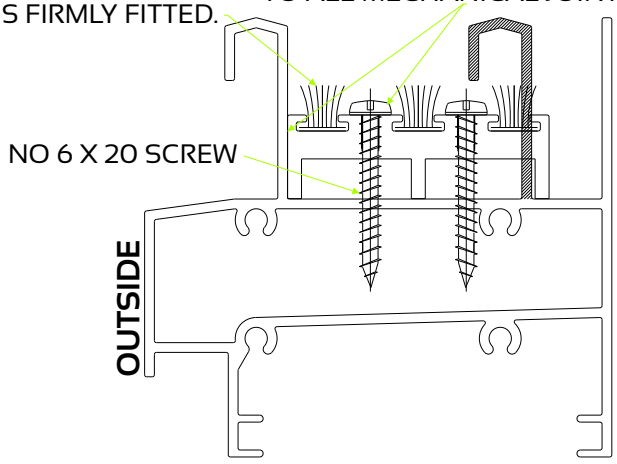

This manual must be read in conjunction with the Installation, Cleaning & Maintenance Document and the Performance Certificates for the relevant system. The manual must also be used in conjunction with the design and cutting list from the latest version of StarFront.

Disclaimer: The right to make alterations is reserved
© 2013 Wispeco (Pty) Ltd, All Rights Reserved

Machining Detail

Jamb Rail

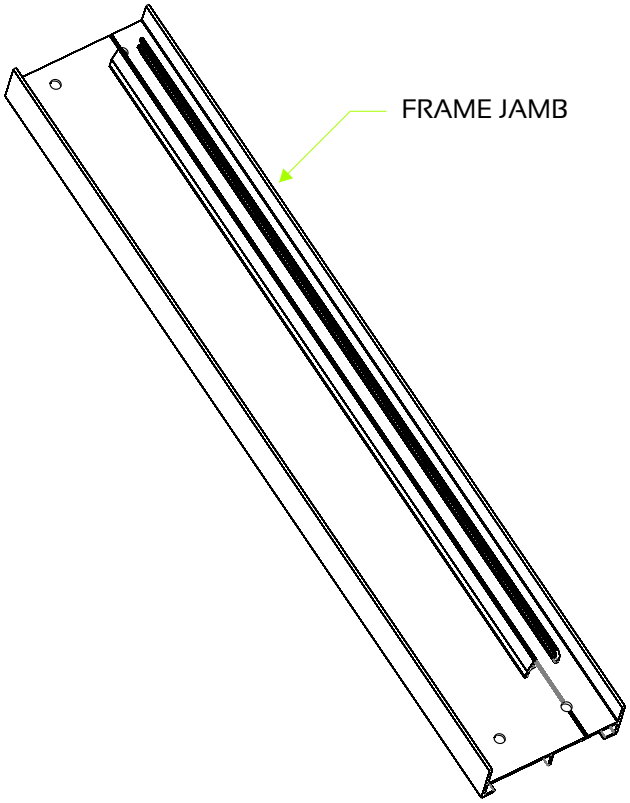

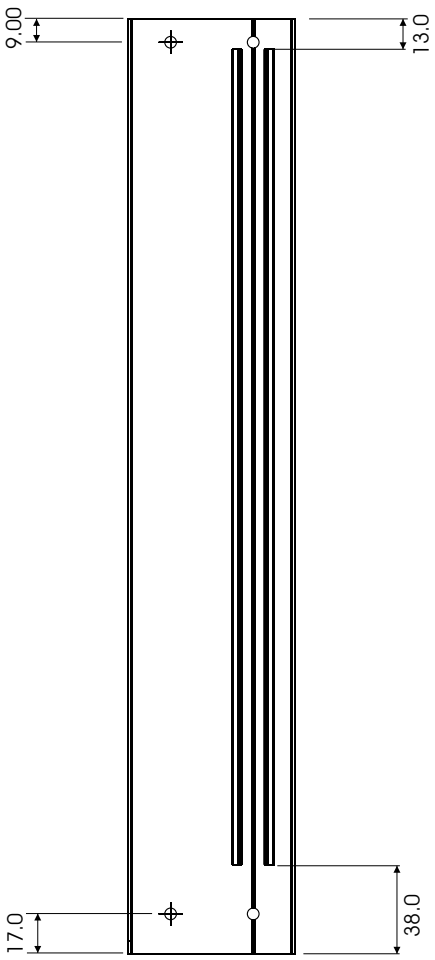

TOP VIEW

N.B:
A NEUTRAL SEALANT SHOULD BE APPLIED TO THE PROFILE ENDS OF THE SILL AND HEAD RAILS ON ASSEMBLY TO PROVIDE A GOOD SEAL ON THE OUTER FRAME BUTT JOINTS.
(ENSURE THAT SEALANT USED IS NON-CORROSIVE)



SECTION VIEW

crealco

This manual must be read in conjunction with the Installation, Cleaning & Maintenance Document and the Performance Certificates for the relevant system. The manual must also be used in conjunction with the design and cutting list from the latest version of StarFront.

Disclaimer: The right to make alterations is reserved
© 2013 Wispeco (Pty) Ltd, All Rights Reserved

Machining Detail

Lock Stile

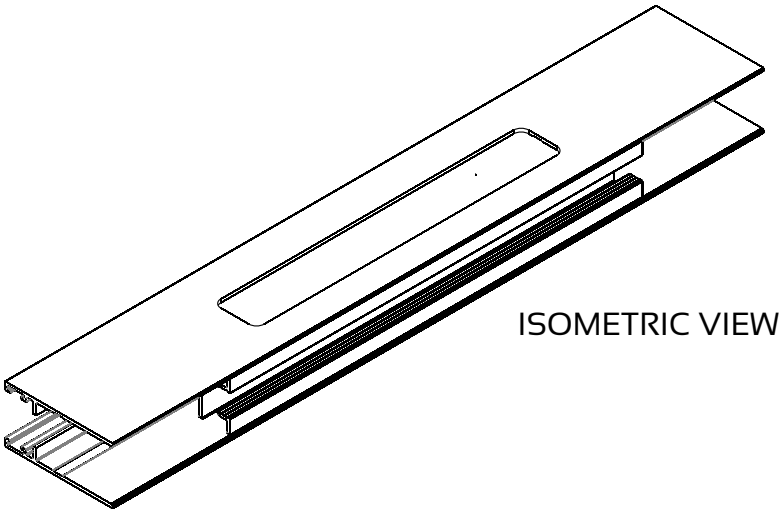

ISOMETRIC VIEW

SASH JAMB

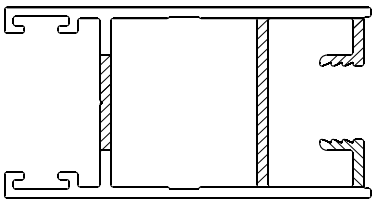

SECTION VIEW

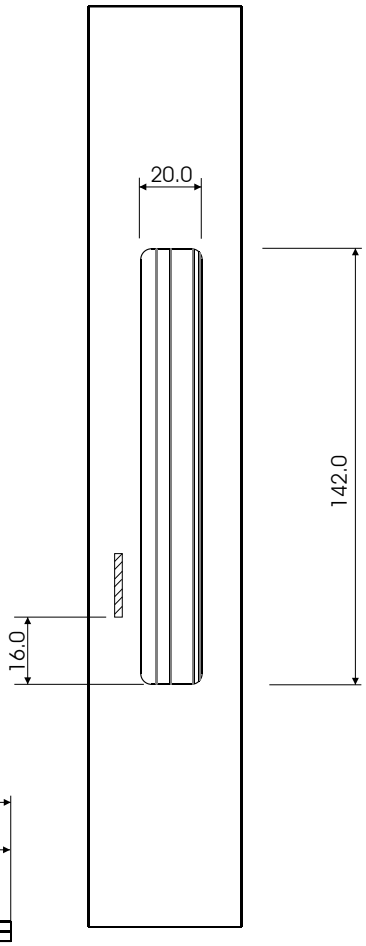

FRONT VIEW

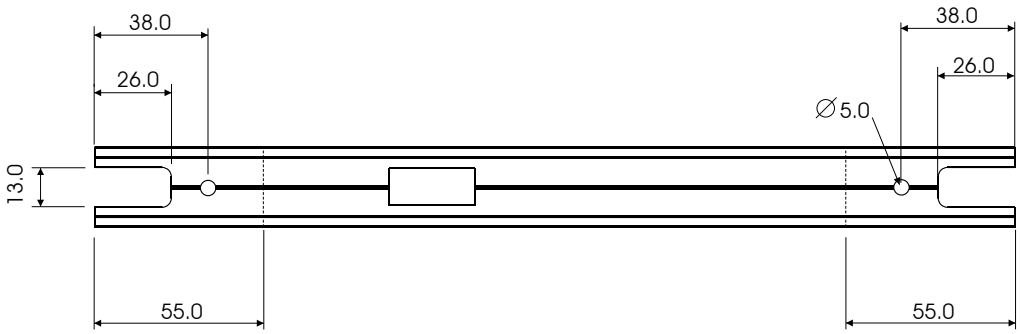

SIDE VIEW

This manual must be read in conjunction with the Installation, Cleaning & Maintenance Document and the Performance Certificates for the relevant system. The manual must also be used in conjunction with the design and cutting list from the latest version of StarFront.

Disclaimer: The right to make alterations is reserved
© 2013 Wispeco (Pty) Ltd, All Rights Reserved

Machining Detail

Interlock

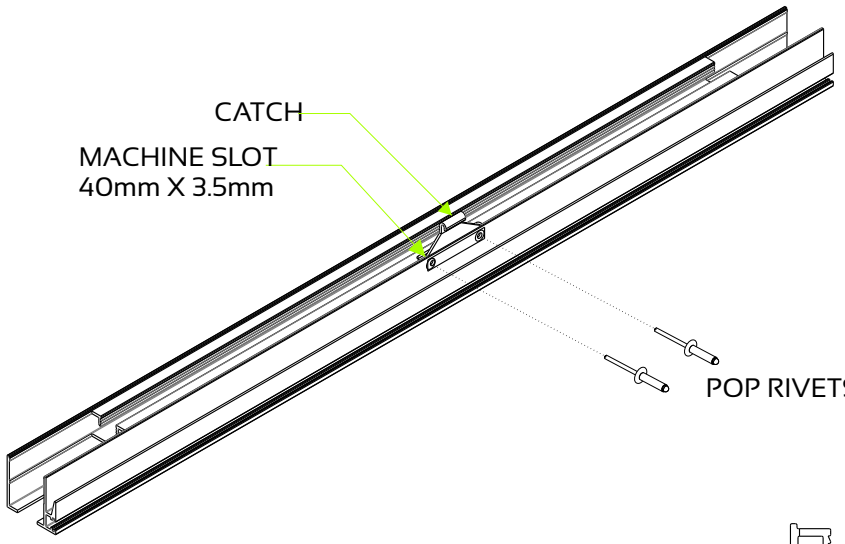

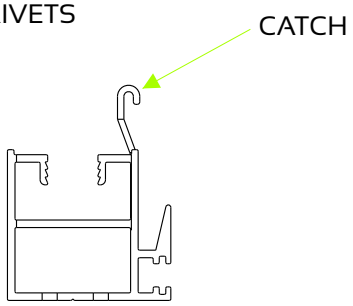

SECTION VIEW

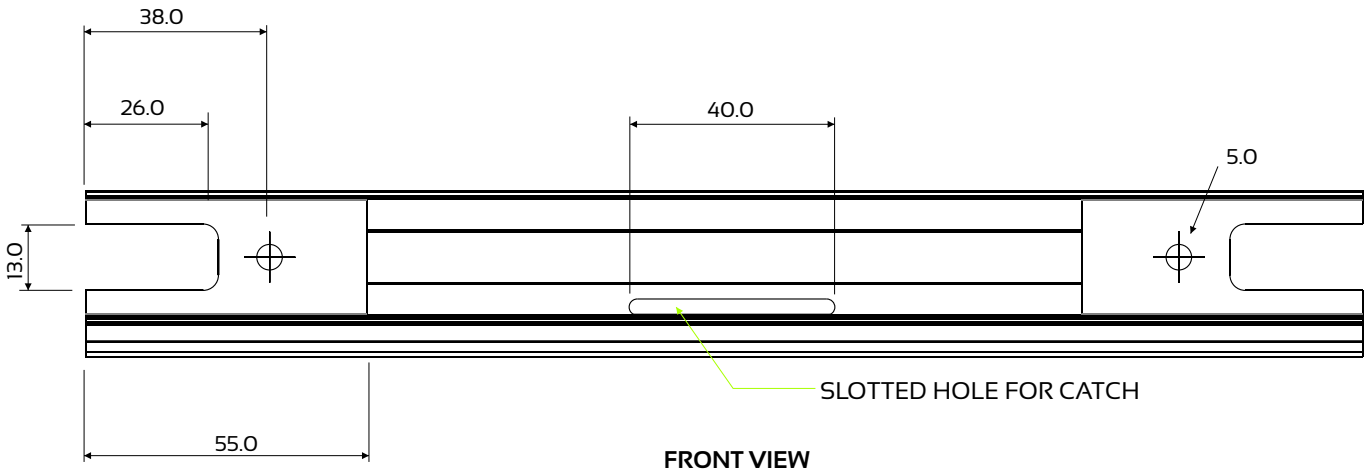

FRONT VIEW

This manual must be read in conjunction with the Installation, Cleaning & Maintenance Document and the Performance Certificates for the relevant system. The manual must also be used in conjunction with the design and cutting list from the latest version of StarFront.

Disclaimer: The right to make alterations is reserved
© 2013 Wispeco (Pty) Ltd, All Rights Reserved

Assembly Detail

Head Sill Rail

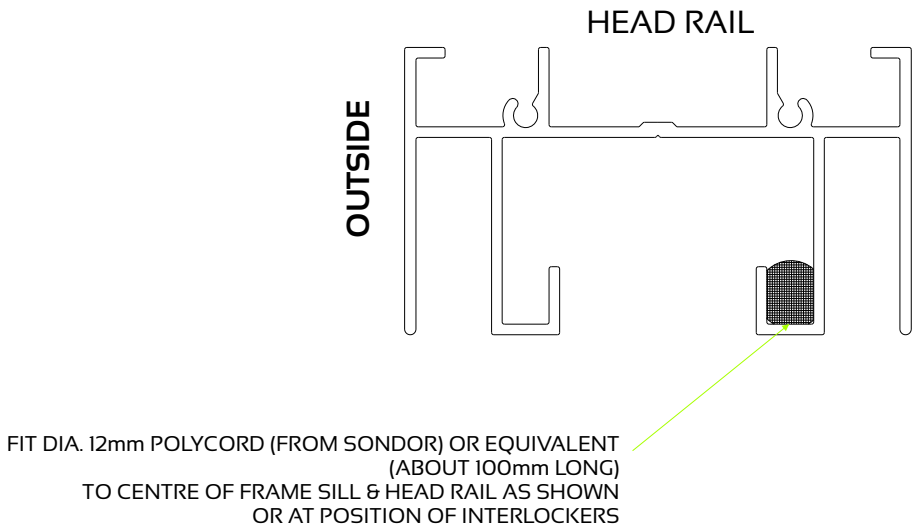

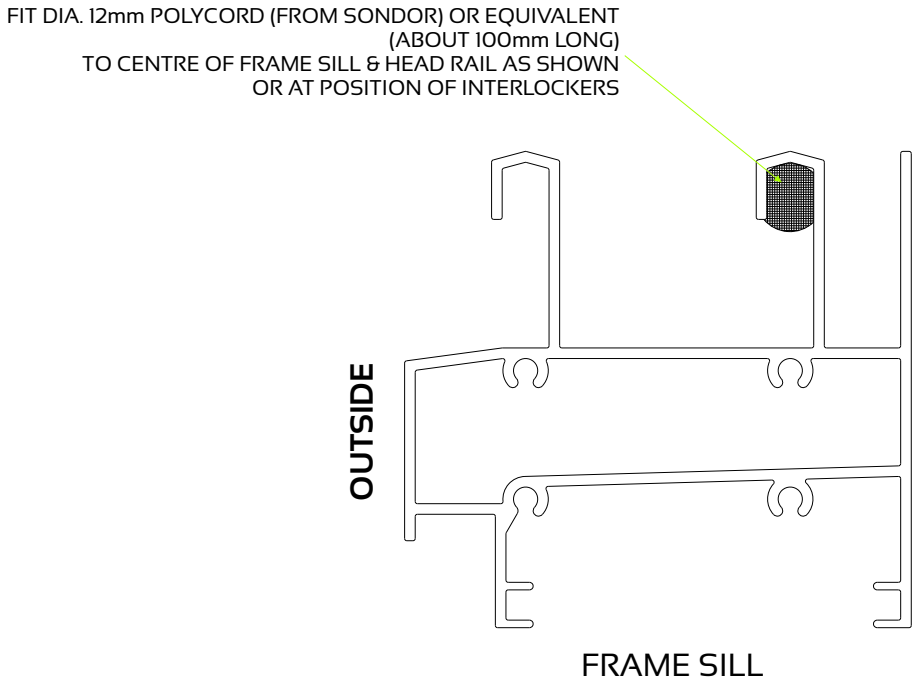

Disclaimer: The right to make alterations is reserved
© 2013 Wispeco (Pty) Ltd, All Rights Reserved

Assembly Detail

Latch

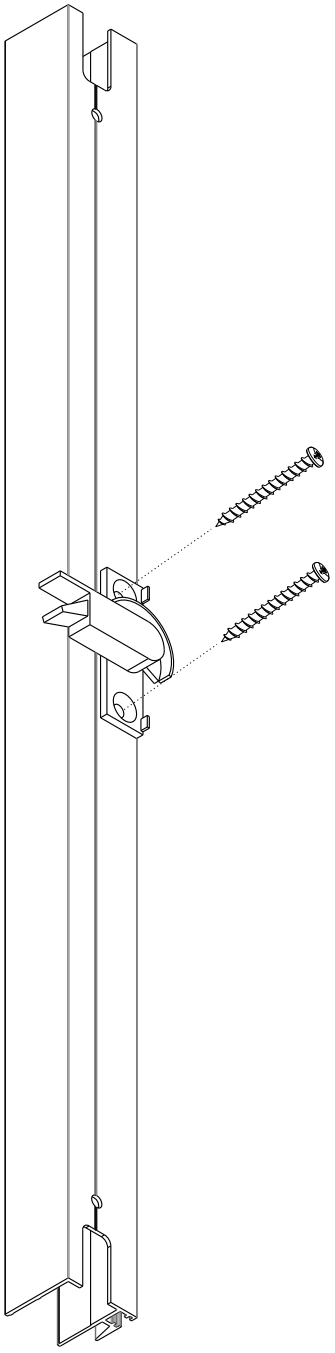

This manual must be read in conjunction with the Installation, Cleaning & Maintenance Document and the Performance Certificates for the relevant system. The manual must also be used in conjunction with the design and cutting list from the latest version of StarFront.

Disclaimer: The right to make alterations is reserved
© 2013 Wispeco (Pty) Ltd, All Rights Reserved

Assembly Detail

Anti-Lift Block

Note : Woolpile must be added to the anti-lift profile before fitting.

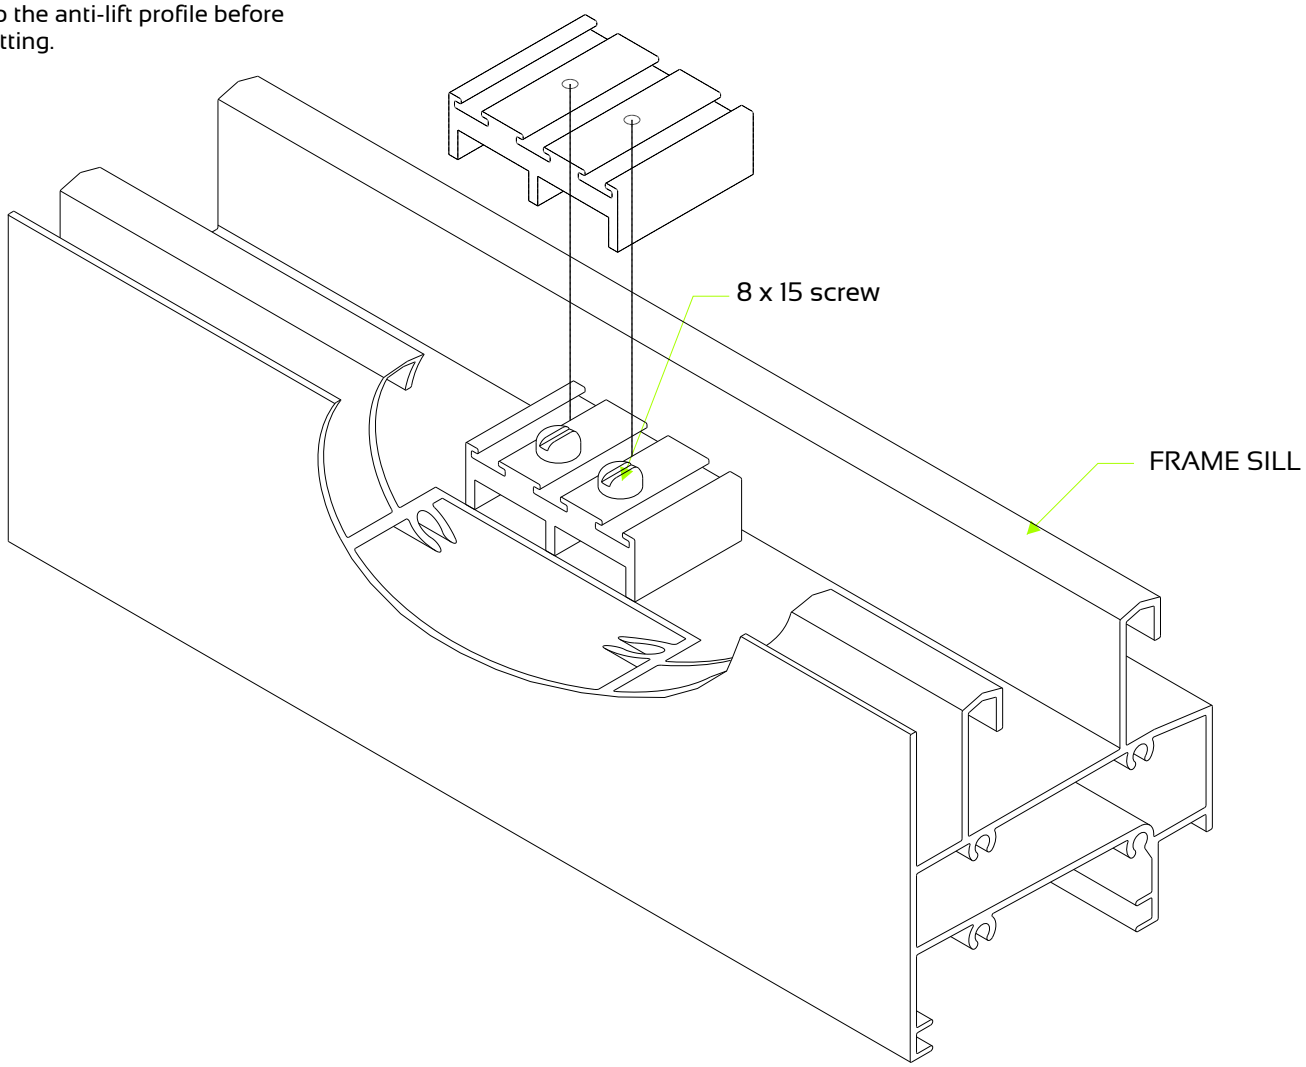

Note : Anti-lift profile must be fitted to both the head and the sill directly above the interlocks when the window is in the closed position.

Disclaimer: The right to make alterations is reserved
© 2013 Wispeco (Pty) Ltd, All Rights Reserved

Sub-Light Detail

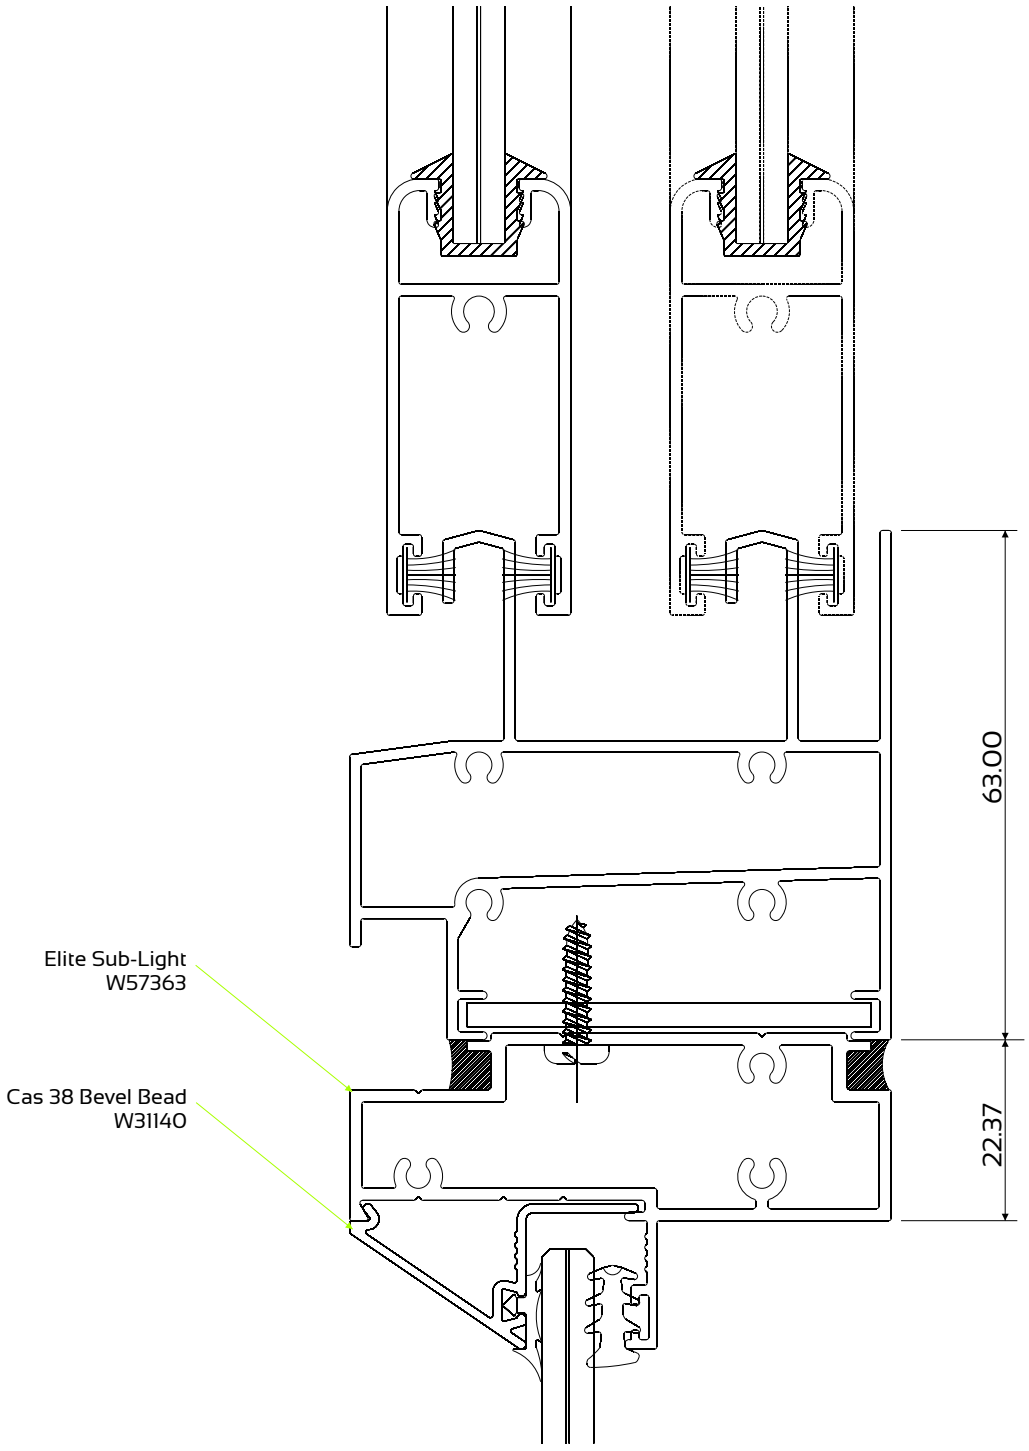

This manual must be read in conjunction with the Installation, Cleaning & Maintenance Document and the Performance Certificates for the relevant system. The manual must also be used in conjunction with the design and cutting list from the latest version of StarFront.

Disclaimer: The right to make alterations is reserved
© 2013 Wispeco (Pty) Ltd, All Rights Reserved

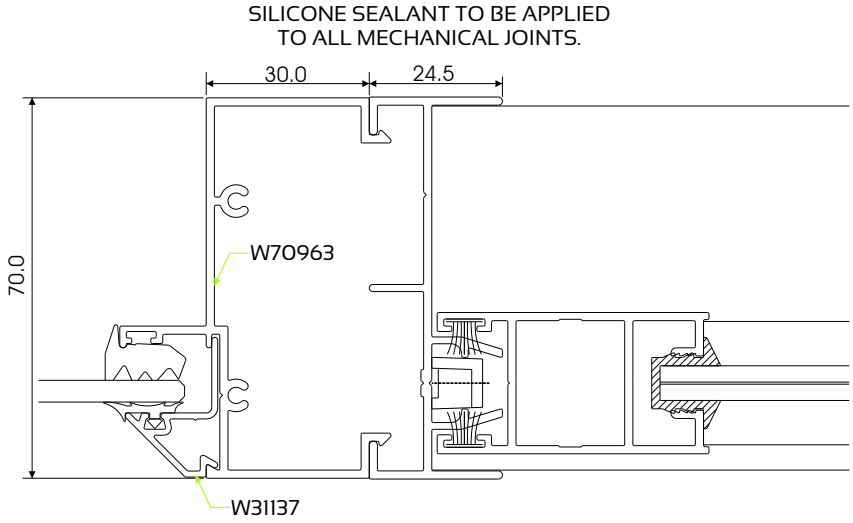

SIDELIGHT COMBO FOR CASEMENT 28

Disclaimer: The right to make alterations is reserved
© 2013 Wispeco (Pty) Ltd, All Rights Reserved

SILICONE SEALANT TO BE APPLIED
TO ALL MECHANICAL JOINTS.

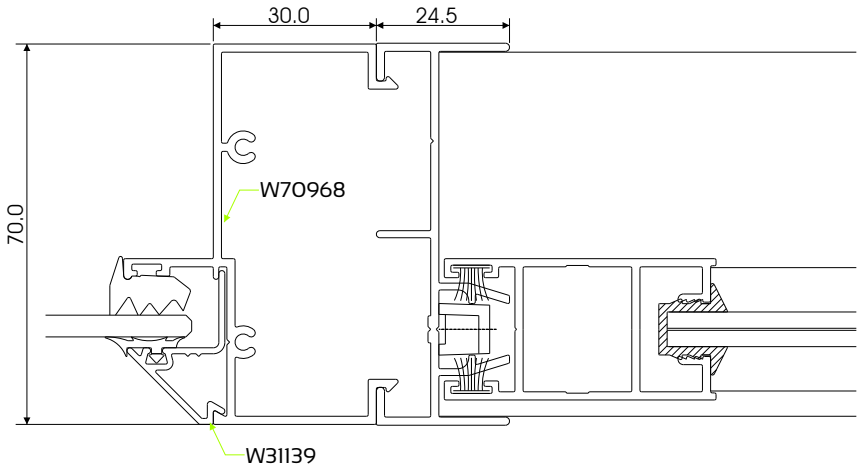

SIDELIGHT COMBO FOR CASEMENT 30.5

Disclaimer: The right to make alterations is reserved
© 2013 Wispeco (Pty) Ltd, All Rights Reserved

SILICONE SEALANT TO BE APPLIED
TO ALL MECHANICAL JOINTS.

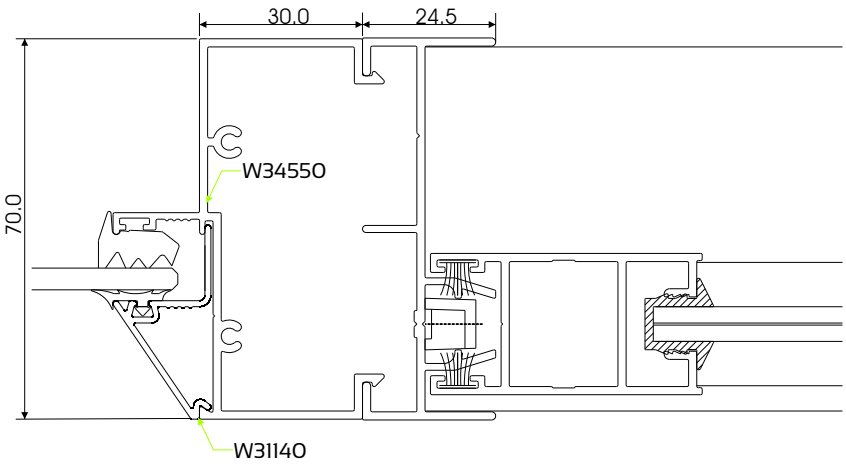

SIDELIGHT COMBO FOR CASEMENT 38

This manual must be read in conjunction with the Installation, Cleaning & Maintenance Document and the Performance Certificates for the relevant system. The manual must also be used in conjunction with the design and cutting list from the latest version of StarFront.

Disclaimer: The right to make alterations is reserved
© 2013 Wispeco (Pty) Ltd, All Rights Reserved

Fitting Of Sill Extension

For A2 & A3

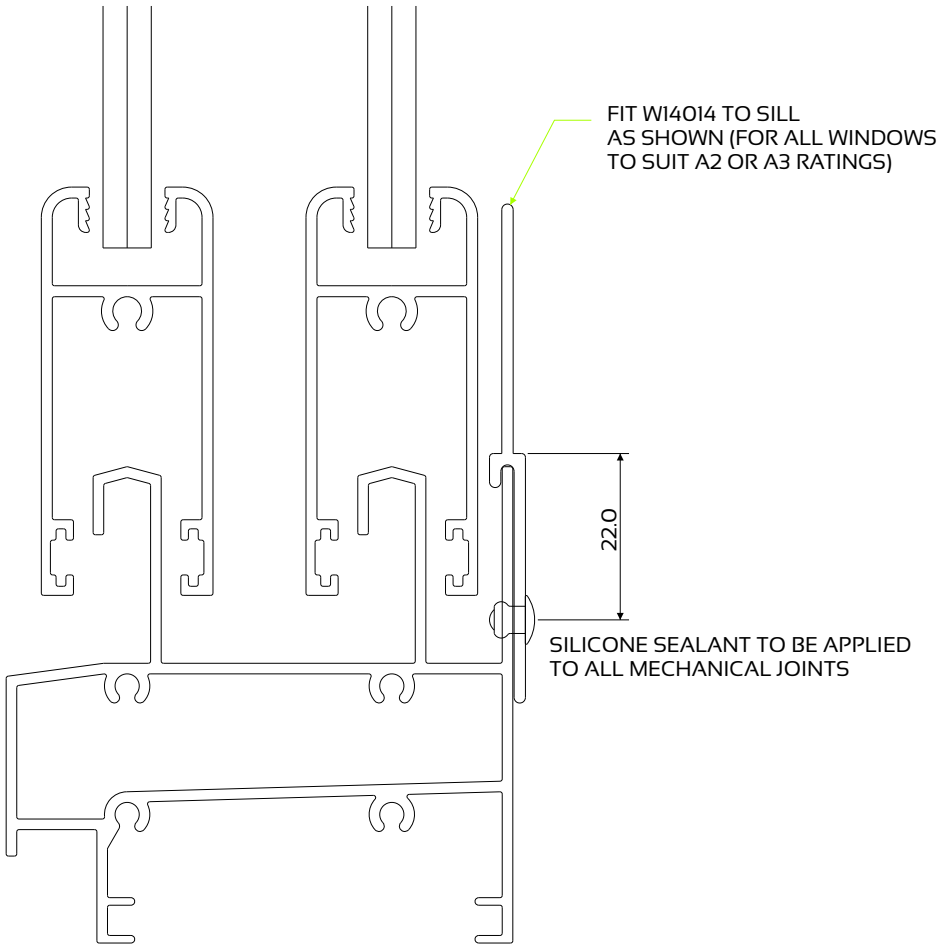

This manual must be read in conjunction with the Installation, Cleaning & Maintenance Document and the Performance Certificates for the relevant system. The manual must also be used in conjunction with the design and cutting list from the latest version of StarFront.

Disclaimer: The right to make alterations is reserved
© 2013 Wispeco (Pty) Ltd, All Rights Reserved

GLAZING

1. SELECTION OF GLAZING METHODS

1.1 SETTING AND LOCATION BLOCKS

Glass-to-metal contact must be avoided at all times by using setting and location blocks having a hardness of 50° to 90° shore A durometer. Use only blocks made of Neoprene, EPDM, Silicone or other elastomeric material.

Setting blocks are to have a minimum thickness of 3mm and must be at least 27mm in length per square metre of glass area.

The position of the setting and location blocks is illustrated in Figure 2.

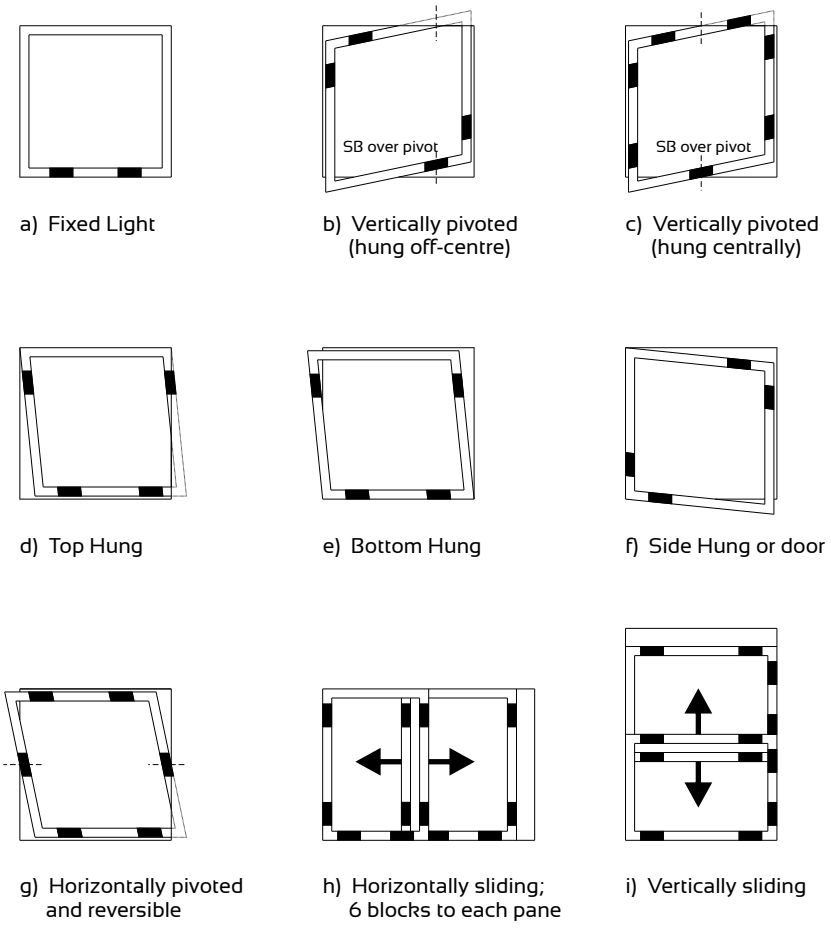

a) Fixed Light

b) Vertically pivoted (hung off-centre)

c) Vertically pivoted (hung centrally)

d) Top Hung

e) Bottom Hung

f) Side Hung or door

g) Horizontally pivoted and reversible

h) Horizontally sliding; 6 blocks to each pane

i) Vertically sliding

FIGURE 2 - POSITION OF SETTING AND LOCATION BLOCKS

Disclaimer: The right to make alterations is reserved
© 2013 Wispeco (Pty) Ltd, All Rights Reserved